

i If a new rear-end door closing control unit is installed, it must be normalized after installation.

1 Open rear-end door with aid of rear-end door handle.

i The rear-end door requires approx. 5 s to raise and clear "relaxation" of the rear-end door is visible in the open state. The upper rear-end door is now normalized.

2 Close rear-end door with aid of rear-end door close switch (S62/35).

i The rear-end door closes completely and locks. The lower rear-end door is now normalized.

3 Reprogram garage position.

i See owner's manual (opening limiter for rear-end door).



P72.20-2308-01

Shown on vehicle with automatic rear-end door closing system and Keyless-Go