

 
 
 
 


P88.40-2242-09

- | | | | | | |
|---|----------------|---|-----------------------------------------|---|--------------------|
| 1 | Engine hood | 5 | Water hose for windshield washer system | 7 | Wiring harness |
| 2 | Expanding clip | 6 | Electrical connector | 8 | Ventilation grille |
| 3 | Cover | | | 9 | Bolts |
| 4 | Insulation mat | | | | |

Modification notes

28.1.04	Disconnect/connect/remove ground lead from battery		
---------	----------------------------------------------------	--	--

 	Remove/Install		
	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Open engine hood (1) and raise to vertical position		AR88.40-P-1000T
2	Remove expanding clip (2) and unclip cover (3) from engine hood (1)	 For this purpose fold back insulating mat (4) in area of cover (3) and fasten with adhesive tape.	
3	Detach water hose for windshield washer system (5) to the washer nozzles		
4	Separate electrical connectors (6)		
5	Detach water hose for windshield washer system (5) and wiring harness (7) from air register (8)		
6	Remove both gas-operated struts on the engine hood (1)	 Refer to: ↓ Remove/install gas pressure strut on engine hood	AR88.40-P-3010T
7	Unscrew bolt (9) on left and right engine hood hinge	 Use an assist to secure the engine hood (1).  Installation: Tighten bolt (9) only until engine hood (1) can be fastened. Tighten bolts (9) after adjusting engine hood (1)	
8	Install in the reverse order		
9	Adjust engine hood (1)		AR88.40-P-3020T