


MODEL 211.0 /2 /6

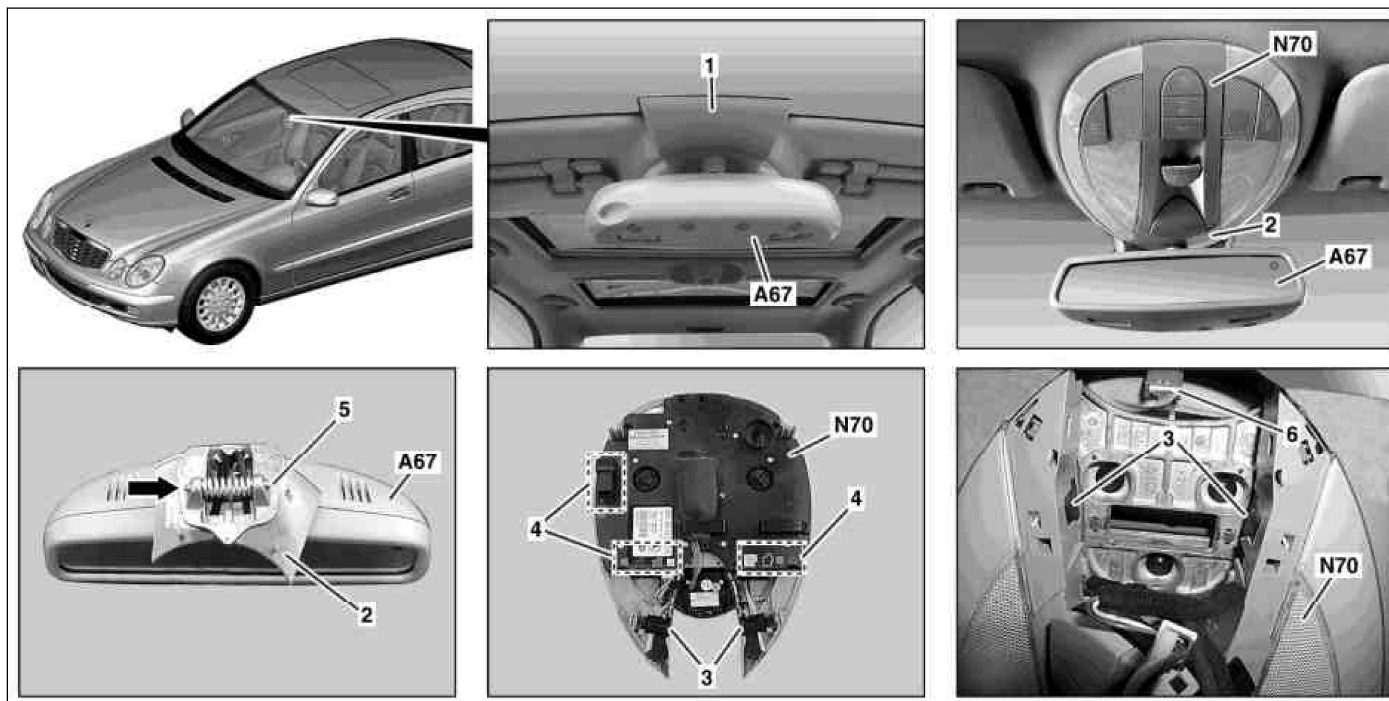

P82.20-2555-09

- 1 Rain/light sensor cover  
2 Mirror base cover  
3 Pushbuttons

 

 
 


- 4 Electrical connections  
5 Spring shackle bolt  
6 Electrical connector


- A67 Inside rearview mirror unit  
N70 Overhead control panel control unit

**Modification notes**

|          |  |        |  |
|----------|--|--------|--|
| 17.10.05 | Disconnect ground line of battery, removed | Step 2 |  |
|----------|--|--------|--|

|         | Remove/install  |  |   |
|---------|---|--|---|
|         | Information on preventing damage to electronic components due to electrostatic discharge  |  | AH54.00-P-0001-01A                        |
| 1.1<br> | Transfer basic data from overhead control panel control unit (N70) to STAR DIAGNOSIS<br><br>Connect STAR DIAGNOSIS and read out fault memory        | When installing new overhead control panel control unit (N70).<br><br><b>Installation:</b> Transfer buffered basic data to new overhead control panel control unit (N70), and for code (414) Tilting/sliding roof, normalize the anti-pinch protection.<br><br>STAR DIAGNOSIS diagnosis system | AD00.00-P-2000-04A<br>*WH58.30-Z-1048-13A |
| 2.1     | Switch off the ignition and remove the transmitter key from the EIS control unit  | On vehicles without code (889)<br>Keyless Go   |   |
| 2.2     | Switch off ignition and place transmitter key out of transmission range of vehicle  | On vehicles with code (889)<br>Keyless Go  |   |
| 3       | Pry off rain/light sensor covering (1) with mounting wedge toward bottom and remove   |  | *110589035900                             |
| 4       | Unclip mirror base cover (2) from overhead control panel control unit (N70)   |  |   |
| 5       | Release inside rearview mirror unit (A67) by pivoting to the side at the mirror base and at the same time pulling downward out of the mirror mount. | Let inside rearview mirror unit (A67) hang from wiring harness.<br><br><b>Installation:</b> Press spring shackle bolt (5) together with pliers (arrow) and allow retainer to latch. Ensure that wiring harness is routed properly.   |   |
| 6       | Disconnect electrical connector (6) from rain/light sensor  |  |   |

|  |  |   |   |
|--|--|---|---|
| 7  | Release overhead control panel control unit (N70) at front by pressing pushbuttons (3)   |   |   |
| 8  | Release overhead control panel control unit (N70) at rear by pushing on it from the side with the mounting wedge   |    | *110589035900                             |
| 9  | Remove overhead control panel control unit (N70) from the headliner until the electrical connectors of the inside rearview mirror unit (A67) and the electrical connections (4) are accessible |   |   |
| 10   | Disconnect electrical connectors of the inside rearview mirror unit (A67) from the overhead control panel control unit (N70) and remove inside rearview mirror unit (A67)                      |   |   |
| 11   | Unplug electrical connectors at electrical connections (4) of overhead control panel control unit (N70) and remove overhead control panel control unit (N70)                                   | <p> Carefully remove overhead control panel control unit (N70), otherwise the ribbon cables could be damaged.</p> <p> The number of electrical connectors is dependent on the vehicle equipment.</p> <p> <b>Installation:</b> Ensure that wiring harnesses are routed correctly.</p> |   |
| 12   | Install in the reverse order   |   |   |
| 13.1   | Normalize tilting/sliding roof   |  For vehicles with code (414) Tilting/sliding roof   |   |
| 14   | Read fault memory, erase if necessary  |   |   |
|  AD | Connect STAR DIAGNOSIS and read out fault memory   | STAR DIAGNOSIS diagnosis system   | AD00.00-P-2000-04A<br>*WH58.30-Z-1048-13A |

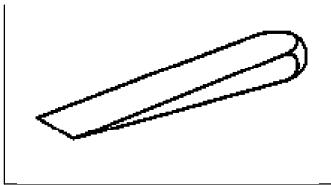

110 589 03 59 00

Mounting wedge

