


MODEL 211.0
with CODE (433) Left dynamic seat, incl. multicontour seat
with CODE (434) Right dynamic seat, incl. multicontour seat

- 1 Soundproofing
- 2 Bracket
- 3 Pneumatic lines
- 4 Electrical connector
- 5 Strut

M40/1 Pneumatic pump for dynamic seat control

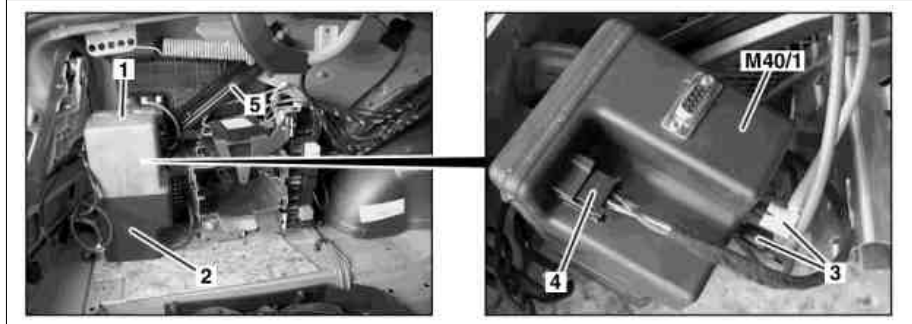


P91.25-2360-04

Modification notes

21.11.06	Special tool added	Step 5	
----------	--------------------	--------	--

			Remove/install	
	☒ ☒	1	Remove left side trim in trunk	On vehicles without code (287) Through-loading feature and without code (924) Bivalent natural gas drive On vehicles with code (287a) Through-loading feature. On vehicles with code (924) Bivalent natural gas drive AR68.30-P-4800T AR68.30-P-4800TA AR68.30-P-4800TB
		2	Remove pneumatic pump for dynamic seat control (M40/1) together with soundproofing (1) upward out of bracket (2)	
		3	Remove soundproofing (1) from pneumatic pump for dynamic seat control (M40/1)	
		4	Disconnect electrical connector (4)	
		5	Seal off pneumatic lines (3) of pneumatic pump for dynamic seat control (M40/1)	☒ *000589043700
		6	Remove pneumatic pump for dynamic seat control (M40/1)	
		7	Remove strut (5)	Only when installing a new pneumatic pump for dynamic seat control (M40/1), on vehicles up to 31.8.06
		8	Install new pneumatic wiring harness for dynamic seat control pneumatic pump (M40/1)	Only when installing a new pneumatic pump for dynamic seat control (M40/1), on vehicles up to 31.8.06 AR91.25-P-1580-01T
		9	Install in the reverse order	
		10	Activate pneumatic pump for dynamic seat control (M40/1) Connect STAR DIAGNOSIS and read out fault memory	After installing new pneumatic pump for dynamic seat control (M40/1). AD00.00-P-2000-04A
	☒ AD	11	Carry out function check	

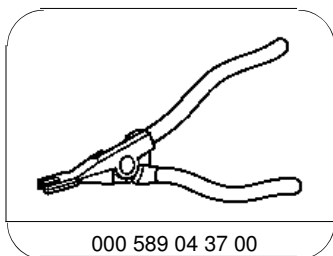

Pliers