


AR91.25-P-1580-01T	Replace pneumatic pump for dynamic seat control		
--------------------	---	--	--



Modification notes


21.11.06	Special tool added		
----------	--------------------	--	--

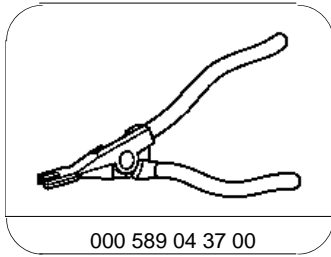

Pliers

  
i In vehicles up to 31.8.06, when the pneumatic pump for dynamic seat control is replaced the pneumatic pump for dynamic seat control with a four-color pneumatic wiring harness from vehicles as of 1.9.06 is installed. The following procedure is shown on model 219.

- 1 Seal off pressure line (3) at overpressure reservoir (1) with 
- 2 Seal off vent line (2) at overpressure reservoir (1) with 

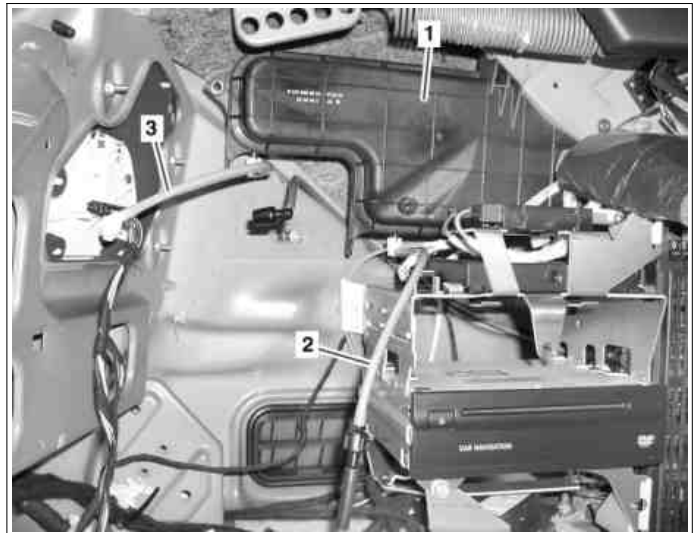

P91.25-2357-11


- 3 Connect green pneumatic line (7) instead of pressure line at overpressure reservoir (1).
- 4 Connect blue pneumatic line (4) instead of vent line at overpressure reservoir (1).
- 5 Connect red pneumatic line (5) to vehicle-side pneumatic line (6).
- 6 Position foam rubber pocket (9) of pneumatic wiring harness (8) beneath the overpressure reservoir (1).

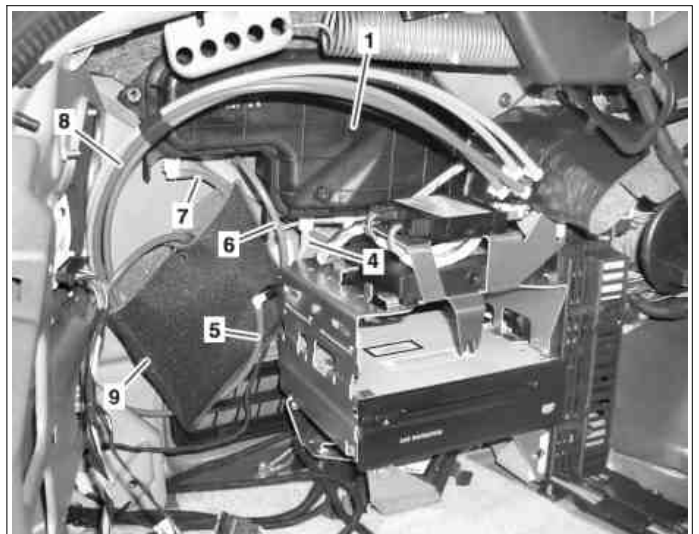

P91.25-2358-11

- 7 After installing the pneumatic pump for dynamic seat control, secure pneumatic wiring harness (8) to damping material (11) with cable ties (10).

i Route pneumatic wiring harness (8) so that no chafing occurs, do not kink.

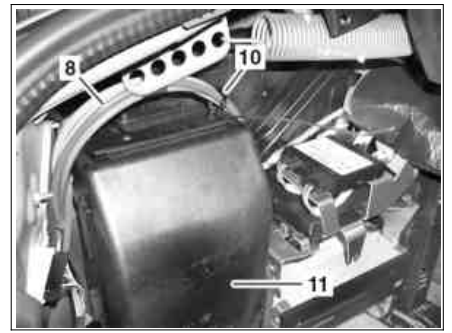

P91.25-2359-01