

Complaints

Faults in control solenoid valve

Fault codes: 2110, 2111, 2112, 2113, 2114, 2115, 2116, 2117, 0748, 0778, 0798, 2716, 2725, 2734, 2759, 2810; individual gears not available, transmission in limp-home mode (occasionally)

It is not possible to check the control solenoid valves for proper operation via the control unit or software. Only the electrical resistance of the valves is checked by means of a voltage and current strength monitoring function.

If there are any deviations from the specified values, there is a short circuit or open circuit and the electro-hydraulic controller unit must be replaced.

Faults in actuators

Fault codes: 0894, 2502, 2505, 2711; and transmission in limp-home mode (occasionally) or no power transmission

These fault codes are always generated when the software detects a malfunction via the rpm sensor signal monitoring function. The cause of the malfunction can sometimes be determined based on the symptom.

If one or more of these fault codes are stored but there is or has been no complaint of this type then no action is required.