

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
<b>E5/2</b>	Right fog lamp	21L
<b>F32</b>	Front prefuse	2L
<b>F32f75</b>	Fuse 75	1K
<b>F34</b>	Interior fuse box	34L
<b>F34f36</b>	Fuse 36	32K
<b>M13</b>	Coolant circulation pump	22L
<b>N10/1</b>	Driver-side SAM control unit with fuse and relay module	18L
<b>N10/11</b>	Passenger-side SAM control unit	4A 12A 20A 28A
<b>N56</b>	Adaptive driving calculation control unit	25L
<b>R13/1</b>	Left front seat heated cushion	31L
<b>R13/2</b>	Left front backrest heated cushion	30L
<b>R13/3</b>	Right front seat heated cushion	27L
<b>R13/4</b>	Right front backrest heated cushion	28L
<b>U74</b>	Valid for diesel engines	16F
<b>U75</b>	Valid for gasoline engines	16F
<b>U150</b>	Valid for engine 112	24E
<b>U927</b>	Valid for basic heated seats	26A
<b>W2</b>	Ground (right front, at lamp unit)	25G
<b>W15/1</b>	Ground (right footwell)	5L 8L
<b>W15/2</b>	Ground (left footwell)	31D
<b>X30/6</b>	Cockpit voltage distributor (CAN) connector	12L
<b>X30/9</b>	Circuit 15 voltage distributor	6L 9L
<b>X55/3</b>	Driver seat connector block	29G
<b>X55/4</b>	Front passenger seat connector block	26G
<b>Z3/11z1</b>	Circuit 15 connector sleeve (fused)	9G
<b>Z4/3z2</b>	Tml. 30 connector sleeve	32E
<b>Z6/46z1</b>	Ground (W15/1) connector sleeve	5E
<b>Z6/46z2</b>	Ground (W15/1) connector sleeve	8G
<b>Z6/46z3</b>	Ground (W15/1) connector sleeve	8E
<b>Z6/49z1</b>	Ground (W2) connector sleeve	22G