

AR60.00-P-0700-01LF	Gap dimensions on hoods, doors and lids		
---------------------	---	--	--

MODEL 222

Check values for gap dimensions

Number	Designation			MODEL 222
BE60.00-P-1002-01BA	Engine hood to fender	Dimension "A"	mm	3 ($\pm 0,5$)
		For picture, see		AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation			MODEL 222
BE60.00-P-1003-01BA	Engine hood to fender	Dimension "A1"	mm	4 (± 1)
		For picture, see		AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation			MODEL 222
BE60.00-P-1004-01BA	Engine hood to headlamp	Dimension "B"	mm	3,5 (± 1)
		For picture, see		AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation			MODEL 222
BE60.00-P-1005-01BA	Engine hood to radiator trim	Dimension "C"	mm	3,5 (± 1)
		For picture, see		AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation			MODEL 222
BE60.00-P-1006-01BA	Protrusion of radiator trim/engine hood	Dimension "C"	mm	1 (± 1)
		For picture, see		AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation			MODEL 222
BE60.00-P-1007-01BA	Engine hood to bumper	Dimension "D"	mm	3,5 (± 1)
		For picture, see		AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation			MODEL 222
BE60.00-P-1008-01BA	Bumper to headlamp	Dimension "E"	mm	2,5 (-1,5/+1)
		For picture, see		AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation			MODEL 222
BE60.00-P-1009-01BA	Front/rear door to roof paneling, side	Dimension "F"	mm	4,5 (± 1)
		For picture, see		AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation			MODEL 222
BE60.00-P-1010-01BA	Front door to fender	Dimension "G"	mm	4 ($\pm 0,5$)

		For picture, see	AR60.00-P-0700-01 LF
--	--	------------------	-------------------------

Check values for gap dimensions

Number	Designation		MODEL 222
BE60.00-P-1011-01BA	Front door to rear door	Dimension "H" mm	4,5 (±0,5)
		For picture, see	AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation		MODEL 222
BE60.00-P-1012-01BA	Rear door to side section, bottom	Dimension "I" mm	4 (±0,5)
		For picture, see	AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation		MODEL 222
BE60.00-P-1013-01BA	Front door cover to rear door cover	Dimension "J" mm	4 (±0,5)
		For picture, see	AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation		MODEL 222
BE60.00-P-1014-01BA	Trunk lid to rear fender at top	Dimension "K" mm	3,5 (±1)
		For picture, see	AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation		MODEL 222
BE60.00-P-1015-01BA	Taillamp to bumper	Dimension "L" mm	2 (±1)
		For picture, see	AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation		MODEL 222
BE60.00-P-1016-01BA	Trunk lid to bumper	Dimension "M" mm	4,5 (±1)
		For picture, see	AR60.00-P-0700-01 LF

Check values for gap dimensions


Number	Designation		MODEL 222
BE60.00-P-1017-01BA	Trunk lid to bumper	Dimension "M1" mm	5 (+2,5)
		For picture, see	AR60.00-P-0700-01 LF

Check values for gap dimensions

Number	Designation		MODEL 222
BE60.00-P-1018-01BA	Rear fender to taillamp	Dimension "N" mm	1 (±0,5)
		For picture, see	AR60.00-P-0700-01 LF


Check values for gap dimensions

Number	Designation		MODEL 222
BE60.00-P-1019-01BA	Fuel filler flap	Dimension "O" mm	2 (±0,5)
		For picture, see	AR60.00-P-0700-01 LF

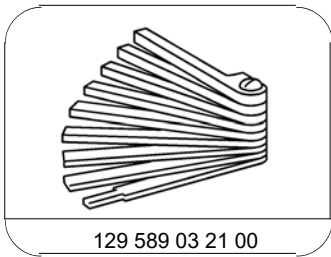


129 589 03 21 00


Feeler gauge

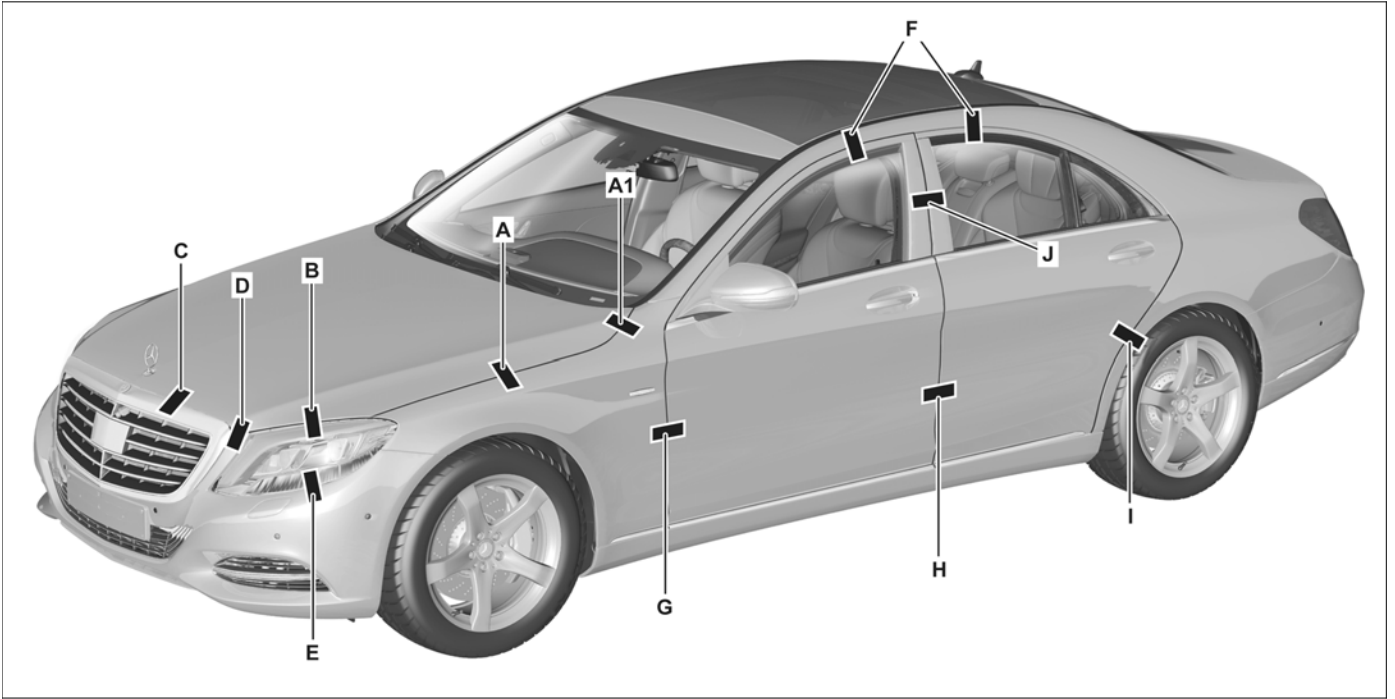

P60.00-2992-09

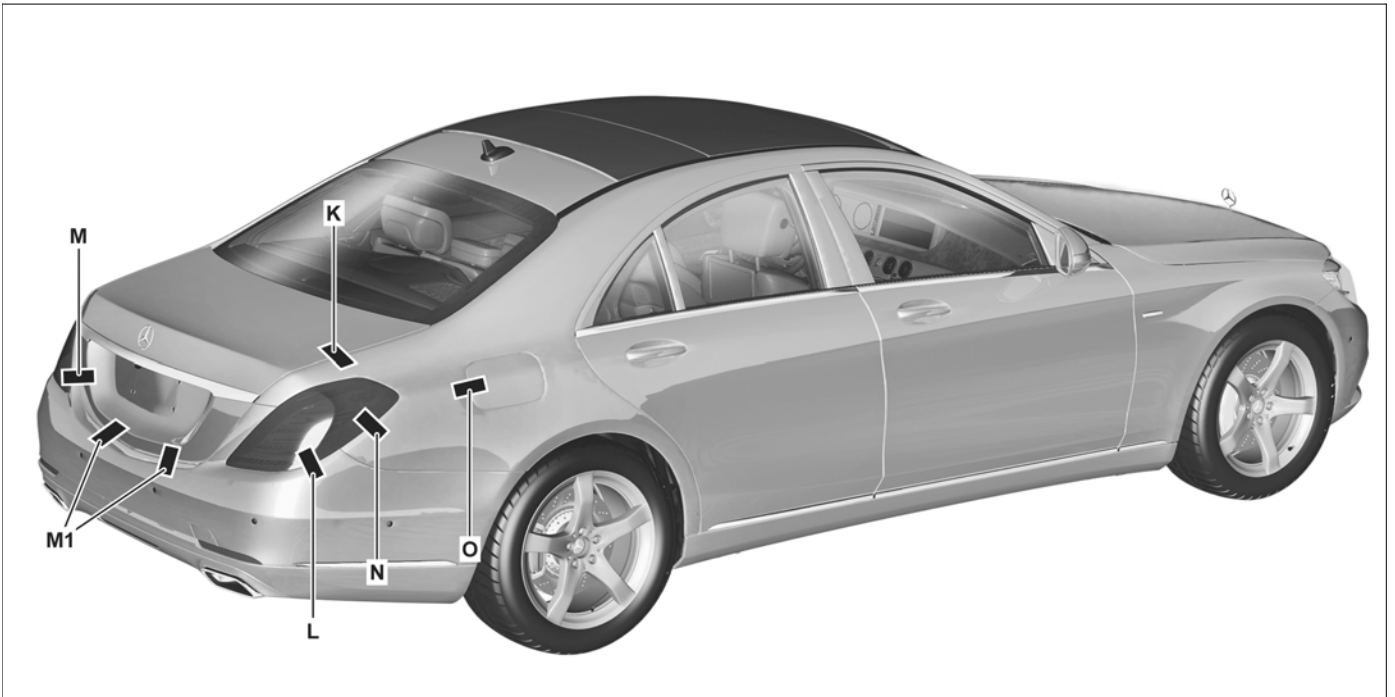

P60.00-2993-09

- 1 Check gap dimensions on hoods, doors and cover with  feeler gauge as shown in drawings.

i Adjust hoods, doors and lids as shown in drawing. The gap should not run wedge-shaped or be too narrow at points. Deviations from parallel gap should be max. 1 mm over the entire length. If the inside clearance is too large or too small, the movable body parts must be centered accordingly. The reference measurements apply only for repair work on vehicles damaged in accidents.