

AR72.10-P-4011-02P	Adjust clearance		
--------------------	------------------	--	--

Nm Front door



Number	Designation		Model 171	Model 211
BA72.10-P-1011-01AB	Screw, self-adjusting clearance	Nm	9	9

Nm Front door

Number	Designation		Model 203	Model 209
BA72.10-P-1012-01A	Screw, self-adjusting clearance	Nm	9	9

Nm Front door

Number	Designation		Model 219.3
BA72.10-P-1014-01M	Screw, self-adjusting clearance	Nm	9

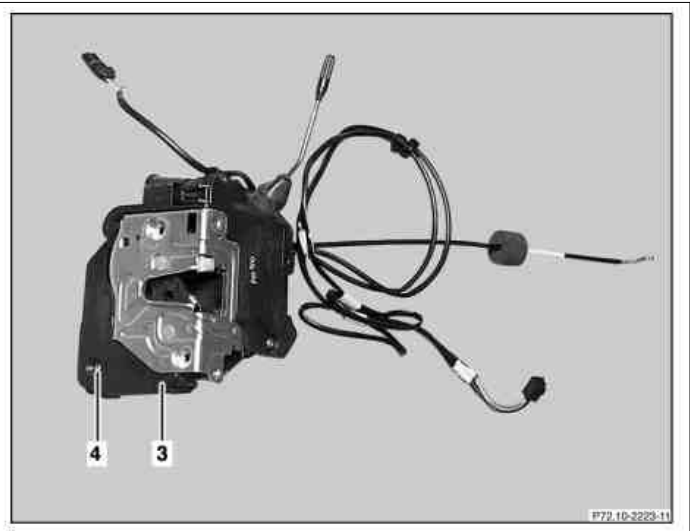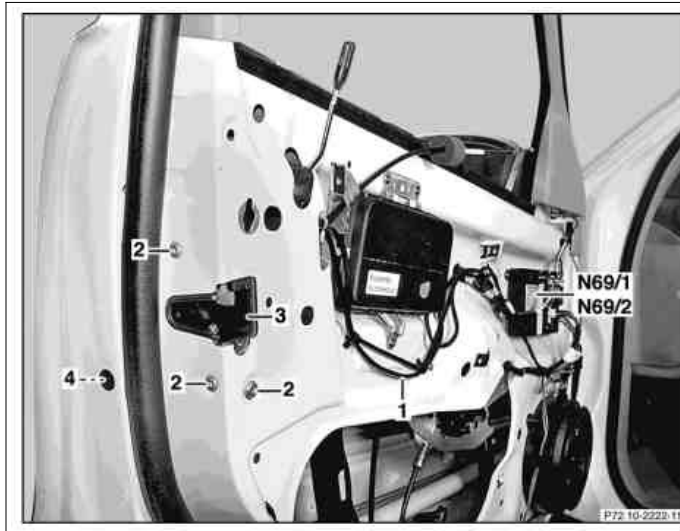

P72.10-2221-08

Illustrated on Model 203.0

4 Bolt, release lever

1 Remove cap above release lever bolt (4).

2 Loosen bolt on release lever (4).

i Left door, right-hand thread, right door, left-hand thread.

3 Completely pull door handle toward outside.

4 Release door handle abruptly from maximum pulled position.

5 Manually push door handle against door paneling with moderate force.

6 Tighten bolt on release lever (4) **Nm**.

7 Install cap above bolt on release lever (4).