

P91.60-3177-79

| A1 | Instrument cluster | B48/1 | Driver-side frontal acceleration | E4e7 | Inner right turn signal lamp |
|-------|------------------------------|-------|----------------------------------|------|----------------------------------|
| A1e15 | Airbag indicator and warning | | sensor | E6/5 | Left outside mirror turn signal |
| | lamp | B48/2 | Passenger-side frontal | | lamp |
| A53/1 | Driver sidebag and windowbag | | acceleration sensor | E6/6 | Right outside mirror turn signal |
| | sensor | | | | |

| A54/1 B41/1 B48 | Passenger-side sidebag and windowbag sensor Front passenger seat occupied recognition sensor (not (sa), and as from 1.6.05 without code (U18) Automatic child seat recognition (ACSR) [AKSE]) Front passenger seat occupied and child seat recognition sensor (up to 18.2.04 for (sa), up to 31.5.05 without (sa), as from 1.6.05 with code (U18) Automatic child seat recognition (ACSR) [AKSE]) | B48/11 B48/12 B48/13 B48/14 E1e5 E2e5 E3e1 E3e7 E4e1 | Left front WSS (Weight Sensing System) sensor (for as from 19.2.04) Right front WSS (Weight Sensing System) sensor (for as from 19.2.04) Left rear WSS (Weight Sensing System) sensor (for as from 19.2.04) Right rear WSS (Weight Sensing System) sensor (for as from 19.2.04) Left turn signal lamp Right turn signal lamp Outer left turn signal lamp Inner left turn signal lamp Outer right turn signal lamp Outer right turn signal lamp | M14/5 M14/6 M14/8 M14/9 N2/7 N2/13 N3/9 N3/10 N10/1 N10/2 N10/11 N69/1 | Right front door CL [ZV] motor Left front door CL [ZV] motor Left rear door CL [ZV] motor Right rear door CL [ZV] motor Restraint systems control unit WSS (Weight Sensing System) control unit (for (S) as from 19.2.04) CDI control unit (with diesel engines) ME-SFI control unit (with gasoline engines) Driver-side SAM control unit with fuse and relay module Rear SAM control unit with fuse and relay module Passenger-side SAM control unit Door control unit front left |
|---|---|---|--|---|--|
| N69/2 N69/3 N69/4 N72/1 N72/1e1 N73 N93 N123/4 | Door control unit front right Door control unit rear left Door control unit rear right Upper control panel control unit Automatic child seat recognition airbag OFF indicator lamp EIS [EZS] control unit Central gateway control unit Emergency call system control unit (only (SA)) Driver emergency tensioning retractor squib | R12/6 R12/7 R12/9 R12/10 R12/11 R12/12 R12/14 R12/14 R12/16 | Left rear ETR squib Right rear ETR squib Driver sidebag squib Front passenger sidebag squib Left rear sidebag squib (with code (293) Left and right rear sidebag) Right rear sidebag squib (with code (293) Left and right rear sidebag) Driver airbag ignition squib 1 Driver airbag ignition squib 2 Left front windowbag squib | R12/27 R46 R46/1 | Driver belt force limiter (up to 31.5.06 (not (SA) or (1)) or up to 30.6.06 (only (SA) or (1))) Driver buckle emergency tensioning retractor squib (as from 1.6.06 (not (SA) or (1))) or as from 1.7.06 (only (SA) or (1))) Front passenger buckle emergency tensioning retractor squib (as from 1.6.06 (not (SA) or (1))) or |
| R12/2 | (up to 31.5.06 (not (sa) or (1)) or up to 30.6.06 (only (sa) or (1)) Front passenger emergency tensioning retractor squib (up to 31.5.06 (not (sa) or (1)) or up to 30.6.06 (only (sa) or (1)) | R12/17 R12/26 | Right front windowbag squib Front passenger belt force limiter (up to 31.5.06 (not (only (or ()))) | S68/3 S68/4 | as from 1.7.06 (only ((a)) or ((a))) Driver seat belt buckle restraint systems switch Front passenger seat belt buckle restraint systems switch |

R12/4 Front passenger airbag squib 1 R12/5 Passenger airbag squib 2

CAN-B Controller Area Network bus class B (interior compartment) (CAN-B) CAN-C Controller Area Network bus, class C (engine compartment) (CAN-C)