
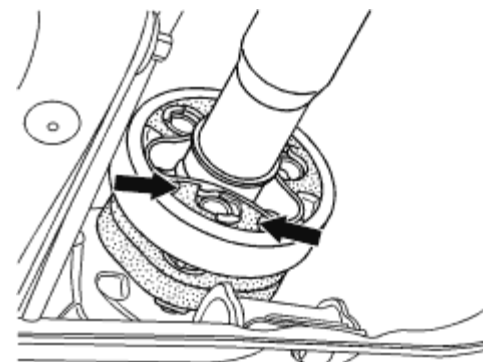


AP41.10-P-4152-02ZA	Check spacers of vibration damper	Model 211	
---------------------	-----------------------------------	-----------	--

1 Check spacers (arrows) of vibration damper for cracks (visual inspection).

 If the spacers are cracked, replace the vibration damper as a separate repair order.



P41.10-0227-01