


MODEL 211.2 up to 1.6.08 except CODE (809) Model year 2009

- 1 Inner paneling of load compartment at side
- 2 Control unit bracket
(with code (220) Parktronic system (PTS)
or with code (527) COMAND APS (with navigation)
or with code (530) COMAND APS USA (with navigation)
or with code (860) TV tuner
or with code (863) TV tuner, digital/analog
or with code (889) Keyless-Go
or with code (529) HIGH Class Japan with code (404) Left multicontour seat

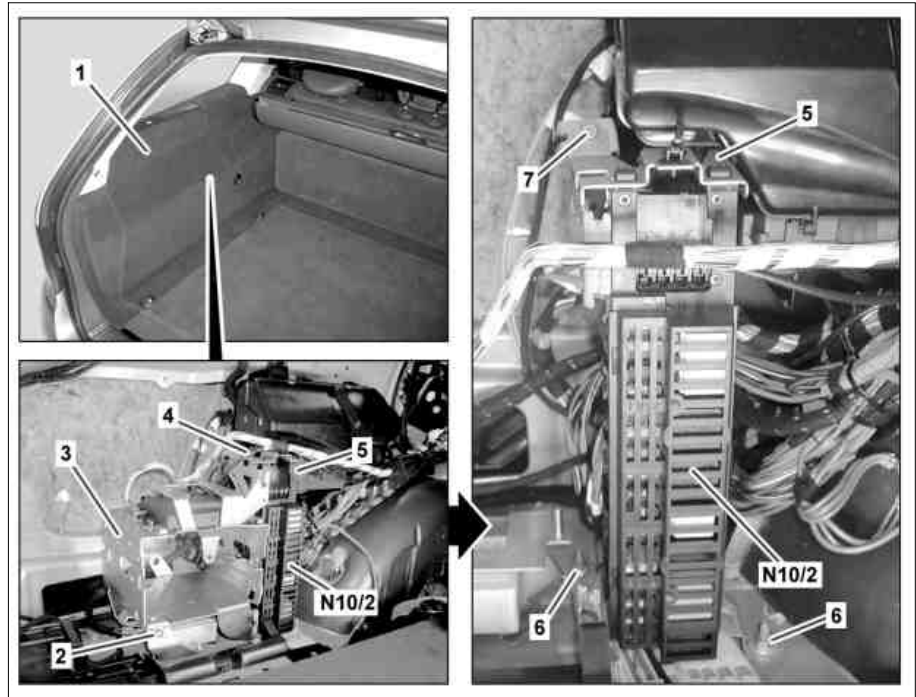

P54.21-3020-06

 


- or with code (529) HIGH Class Japan with code (433) Left dynamic seat, incl. multicontour seat
- or with code (529) HIGH Class Japan with code (475) Tire pressure monitor (Siemens)
- or with code (529) HIGH Class Japan with code (550) Trailer hitch)
- 3 Control unit bracket
(with code (220) Parktronic system (PTS)
or with code (527) COMAND APS (with navigation)
or with code (530) COMAND APS USA (with navigation)
or with code (860) TV tuner
or with code (863) TV tuner, digital/analog
or with code (889) Keyless-Go

- or with code (529) HIGH Class Japan with code (404) Left multicontour seat
- or with code (529) HIGH Class Japan with code (433) Left dynamic seat, incl. multicontour seat
- or with code (529) HIGH Class Japan with code (475) Tire pressure monitor (Siemens)
- or with code (529) HIGH Class Japan with code (550) Trailer hitch)

- 4 Wiring harness
- 5 Bracket
- 6 Nut
- 7 Screw

N10/2 Rear SAM control unit with fuse and relay module

☒ ☒	Remove/install		
⚠	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1 AD	Connect STAR DIAGNOSIS and store basic data from rear SAM control unit with fuse and relay module (N10/2) in STAR DIAGNOSIS temporarily Connect STAR DIAGNOSIS and read out fault memory	Only when installing new rear SAM control unit with fuse and relay module (N10/2). i Installation: Transfer temporarily stored basic data to the new rear SAM control unit with fuse and relay module (N10/2).	AD00.00-P-2000-04A
2	Remove left interior trim in the side of the of cargo area (1) and fold up sound insulation		AR68.30-P-1180T
3	Remove hazard warning triangle		

4	Unscrew bolt (2), remove the control unit bracket (3) and place to one side	On vehicles with code (220) Parktronic system (PTS) or with code (527) COMAND APS (with navigation) or with code (530) COMAND APS USA (with navigation) or with code (860) TV tuner or with code (863) TV tuner, digital/analog or with code (889) Keyless Go or with code (529) HIGH Class Japan and code (404) Left multicontour seat or with code (529) HIGH Class Japan and code (433) Left dynamic seat, incl. multicontour seat or with code (529) HIGH Class Japan and code (475) Tire pressure monitor (Siemens) or with code (529) HIGH Class Japan and code (550) Trailer hitch	
5	Detach wiring harness (4) from bracket (5) and place to one side		
6	Unscrew nuts (6)		
7	Unscrew bolt (7)		
8	Disconnect electrical connectors on rear SAM control unit with fuse and relay module (N10/2) and remove the rear SAM control unit with fuse and relay module (N10/2) from the cargo area	 The electrical connector leading to circuit 30 must be the first to be disconnected and the last to be contacted. The number of electrical connectors depends on the vehicle equipment.	
9	<p> GF</p> <p>Check fuse and relay assignment at the rear SAM control unit with fuse and relay module (N10/2)</p> <p>Fuse assignment of fuse and relay box in trunk</p> <p> GF</p> <p>Relay assignment of fuse and relay box in trunk</p>	<p>Only when replacing the rear SAM control unit with fuse and relay module (N10/2).</p> <p>Up to and including code (805) Model year 2005</p> <p>with code (806) Model year 2006</p> <p>As of code (807) Model year 2007</p> <p>Up to and including code (806) Model year 2006</p> <p>As of code (807) Model year 2007</p>	<p>GF54.15-P-1256-06TA</p> <p>GF54.15-P-1256-06TB</p> <p>GF54.15-P-1256-06TM</p> <p>GF54.15-P-1257-04T</p> <p>GF54.15-P-1257-04TM</p>
10	Install in the reverse order		