

MODELS 211.0/ 2

N2/7 Restraint systems control unit



P91.60-2444-06

	Restraint systems control unit position	The restraint systems control unit (N2/7) is located on the center tunnel in the direction of travel below the lower control panel control unit.	
	Restraint systems control unit - task		GF91.60-P-4018-01T