


MODEL 211.0 /2 /6 up to 30.6.04
with CODE (275) Memory package (driver seat, steering column, mirrors)
with CODE (242) Electrically adjustable front passenger seat with memory

Shown on left front seat

- 1 Front seat
- 2 Bolts
- 3 Input shaft

- M27m2 Rear up/down motor
- M28m2 Rear up/down motor
(with code (242) Electrically adjustable front passenger seat with memory)
- N32/1 Driver front seat adjustment control unit with memory
- N32/2 Passenger-side front seat adjustment control unit with memory
(with code (242) Electrically adjustable front passenger seat with memory)

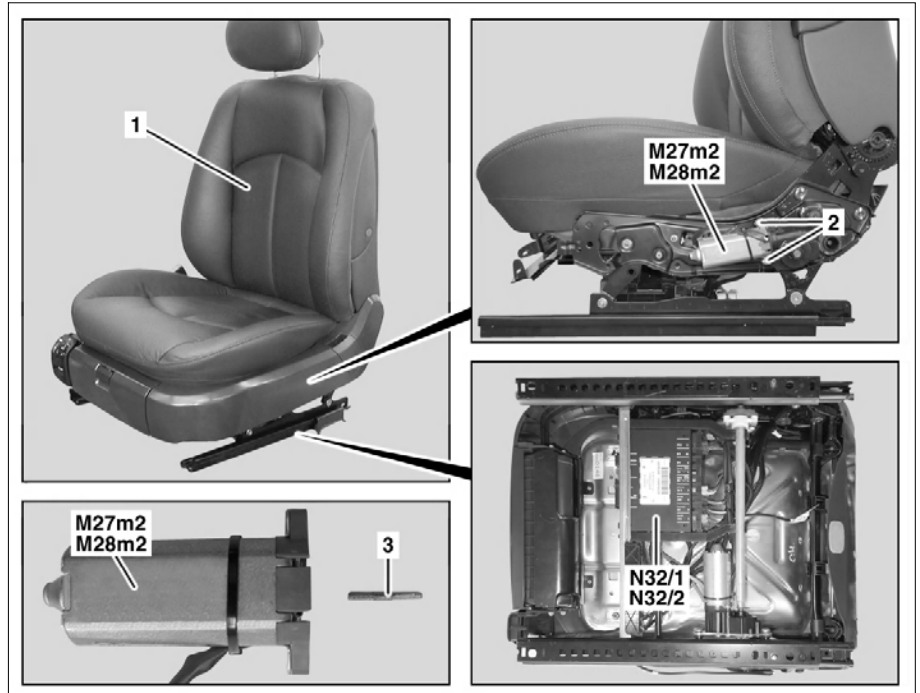

P91.29-2203-06

		Remove/install			
1	☒ ☒	Remove left or right front seat (1)	AR91.10-P-1000T		
2		Detach paneling on the outside of the front seat frame	Driver seat or front passenger seat without code (842) Folding front passenger backrest (usable as table) Front passenger seat with code (842) Folding front passenger backrest (usable as table) AR91.10-P-1200T AR91.10-P-1200TA		
3		Place front seat (1) on its side on the backrest			
4		Remove bolts (2) and pull out rear up/down motor (M27m2) or rear up/down motor (M28m2)	<table border="1" style="width:100%; border-collapse: collapse;"> <tr> <td style="width:10px; text-align: center;">i</td> <td>Observe drive shaft (3).</td> </tr> </table>	i	Observe drive shaft (3).
i	Observe drive shaft (3).				
5		Expose electrical line and detach electrical connector from driver front seat adjustment control unit with memory (N32/1) or passenger-side front seat adjustment control unit with memory (N32/2)			
6		Install in the reverse order			