


MODEL 211.0 /2 /6 up to 14.8.07

Shown on left front seat up to 31.5.05 with code (275) memory package (driver seat, steering column, mirrors)

1 Head restraint

M27m4 Head restraint up/down motor (with code (275) Memory package (driver seat, steering column, mirrors))

M28m4 Head restraint up/down motor (with code (242) Electrically adjustable front passenger seat with memory)

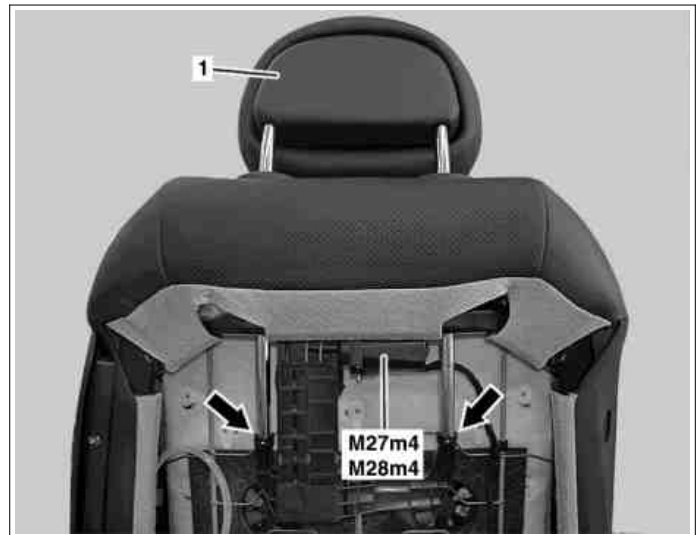

P91.16-2287-11

☒ ☒	Remove/install		
⚠	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove seat-back lining from front seat backrest	On vehicles with code (242) Electrically adjustable front passenger seat with memory or with code (275) Memory package (driver seat, steering column, mirrors) or on vehicles as of 1.6.05. Driver seat as of 1.7.04, Front passenger seat as of 1.7.04 without code (842) Folding front passenger backrest (usable as table).	AR91.10-P-1910TB
2	Move front seat forward and set front seat backrest at an incline to the rear		
3	Switch off the ignition and remove the transmitter key from the EIS control unit	On vehicles as of 1.6.05.  <b>i</b> On vehicles with code (889) Keyless-Go, press the Keyless-Go start and stop button repeatedly until the ignition is switched off. Remove the transmitter key from the vehicle and store it at a location beyond its transmission range (at least 2 m).	
4	Detach driver NECK-PRO head restraint separation point or front passenger NECK-PRO head restraint separation point and expose relevant electrical line	On vehicles as of 1.6.05.  <b>i</b> Note installation position of electrical line and securing clamp.	
5	Pull head restraint (1) out of the front seat backrest	<b>i</b> On vehicles without code (242) Electrically adjustable front passenger seat with memory or without code (275) Memory package (driver seat, steering column, mirrors), the release on the head restraint guide has to be pressed.  <b>i</b> <b>Installation:</b> On vehicles with code (242) Electrically adjustable front passenger seat with memory or with code (275) Memory package (driver seat, steering column, mirrors): Check correct latching of head restraint (1) in head restraint up/down motor (M27m4 or M28m4) (arrow).	
6	Install in the reverse order		