



P72.12-2194-07

## Shown on left rear door

1 Fixed window  
2 Window seal

3 Window separator bar  
4 Bolt

5 Bolt

	Remove/Install		
1	Completely open crank window		
2	Remove outer sealing rail on rear door		AR72.12-P-1014T
3	Remove inner sealing rail on rear door		AR72.12-P-1013T
4	Remove door foil from rear door	Remove door foil only until bolt (5) is accessible. Do not remove left rear door control unit and right rear door control unit	AR72.12-P-0105T
5	Remove window seal (2) from window separator bar (3)	Installation: Use lubricant.	*BR00.45-Z-1010-06A
6	Unscrew bolt (4)		
7	Unscrew bolt (5).		*BA72.12-P-1014-01A
8	Withdraw window separator bar (3) from rear door	For this purpose, rotate window separator bar (3).	
9	Pull stationary window (1) out of rear door toward front	Installation: Apply lubricant to seal (arrows) of stationary window (1)	*BR00.45-Z-1010-06A
10	Install in the reverse order		

## Rear door

Number	Designation	Model
BA72.12-P-1014-01A	Bolt, corner window separator bar to inner door panel	211
		Nm 7

## Repair materials

Number	Designation	Order number
BR00.45-Z-1010-06A	Antifriction agent	A 000 989 03 67