

P42.20-2110-09

1	Side paneling	77	Rear cover	91	Cable slack adjuster
35	Crossmember	79	Unlocking cable	105d	Heat shield
71	Pedal assembly	79a	Tensioning shackle	105e	Heat shield
72	Bolt	85	Front brake cable	S12	Parking brake indicator switch
75	Parking brake pedal	85a	Tensioning shackle		
76	Front cover	85b	Rubber ring		

Modification notes

12.12.02	Check version of pedal assembly, added	Step 15	BT42.20-P-0510-01A
----------	--	---------	--------------------

	Remove/install		
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Raise vehicle with lifting platform		AR00.60-P-1000T
2	Remove crossmember (35)		*BA62.30-P-1001-01A
3	Detach heat shields (105d, 105e) and slide back or remove	Depending on accessibility	
4	Preload automatic slack adjuster (91)		AR42.20-P-0520-01A
5	Detach front brake cable (85) at automatic cable slack adjuster (91)	<p> Installation: to attach front brake cable (85): ↓ Pre-tension automatic cable slack adjuster (91) again.</p> <p> Installation: after attaching front brake cable (85): ↓ Slacken automatic cable slack adjuster (91)</p>	AR42.20-P-0520-01A AR42.20-P-0520-02A AR68.10-P-1500T
6	Remove left cover below instrument panel		
7	Remove side paneling (1) in left front footwell		
8	Detach front cover (76) of pedal assembly (71)		
9	Unlock and disconnect electrical connector on parking brake indicator switch (S12)		
10	Unscrew bolts (72) and take off pedal assembly (71)		*BA42.20-P-1001-01A
	Friction brake of parking brake pedal assembly, function		GF42.20-P-1000A
11	Take off rear cover (77) from pedal assembly (71)		
12	Detach front brake cable (85) from tensioning shackle (85a)	Installation: Pay attention to the correct position of the rubber ring (85b) in the tensioning shackle (85a).	
13	Unclip front brake cable (85) from pedal assembly (71)		*129589116300


14	Detach unlocking cable (79) from tensioning shackle (79a)		
15	Unclip unlocking cable (79) from pedal assembly (71) with tool for unlocking cable Tool for releasing parking brake control cable		WF58.50-P-4220-01A
16	Install in the reverse order		
	Checking		
17	Check pedal travel at parking brake pedal (75); adjust parking brake if necessary		AR42.20-P-0540T

Nm Crossmember and front reinforcement

Number	Designation		Model 211
BA62.30-P-1001-01A	Bolt, crossmember to body	Nm	25

Nm Parking brake

Number	Designation		Model 211
BA42.20-P-1001-01A	Bolt, foot-operated parking brake pedal assembly at front wall pillar	Nm	12

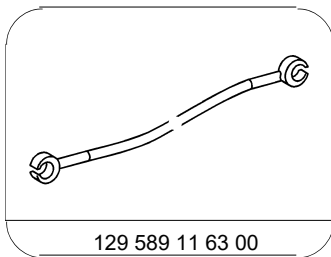

129 589 11 63 00

Snap-release tool