


Shown on left side of vehicle, model 211.0 with code (287a) Through-loading feature


- 1 Front entrance paneling
- 2 Front edge guard
- 3 Rear entrance paneling
- 4 Rear edge guard

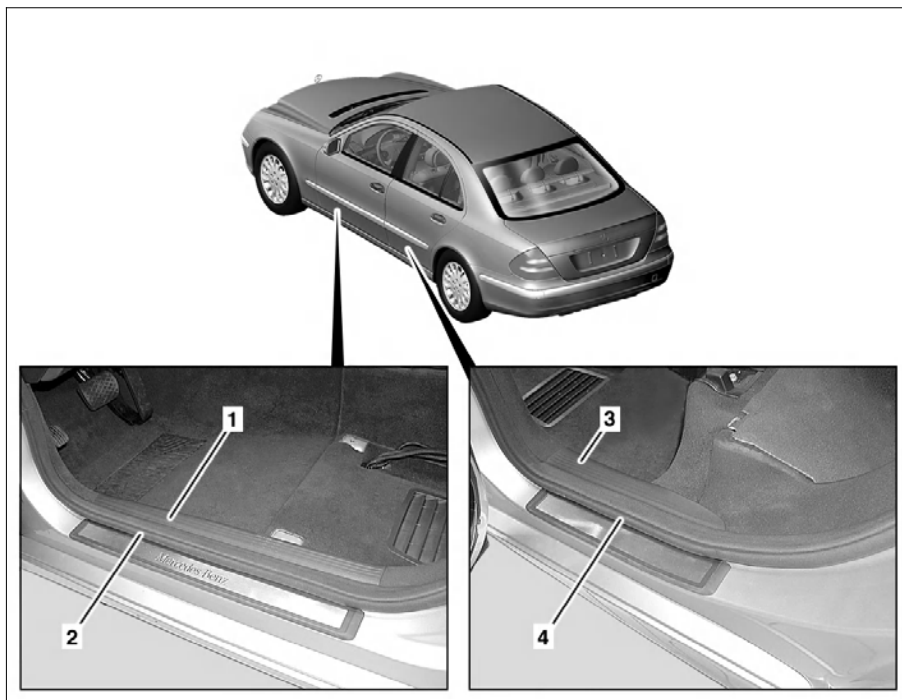

P68.20-2619-06

Shown on left side of vehicle, model 211.0 with code (287a) Through-loading feature

- 5 Wiring harness
- 6 Footwell air grate, rear
- 7 B-pillar paneling
- 8 Load anchor
- 9 Rear floor covering
- 10 Clip

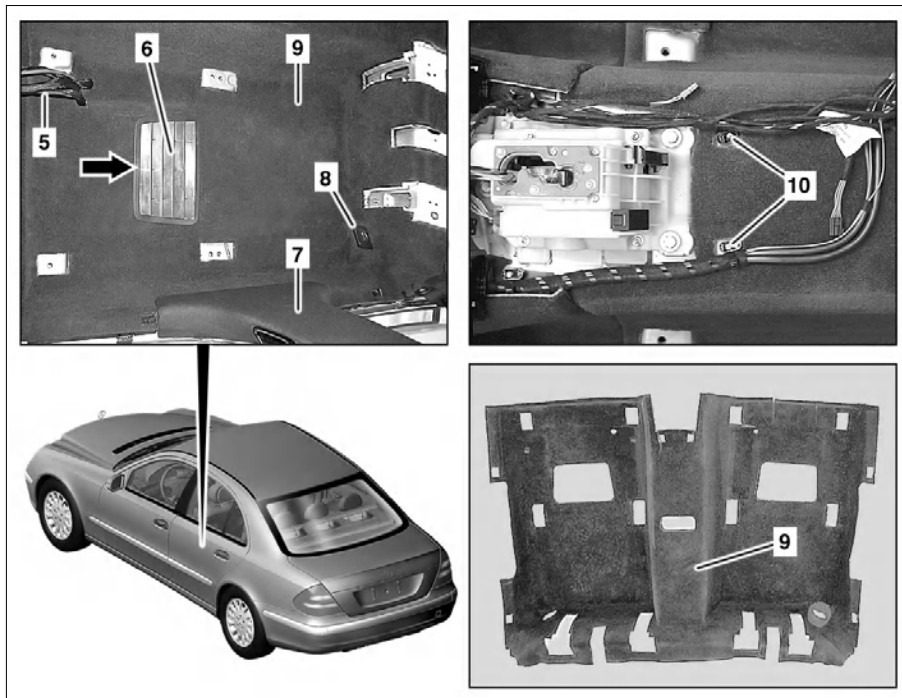

P68.20-2620-06

Remove/Install		
1	Remove front seat	i Remove driver and passenger seat. AR91.10-P-1000T
2.1	Remove rear seat cushion	Model 211.0 without code (287a) Through-loading feature AR91.12-P-1020T
2.2	Remove rear seat cushion pivot bearing	Model 211.0 with code (287a) Through-loading facility AR91.12-P-1770T Model 211.2 AR91.12-P-1770TA AR68.20-P-2320T
3	Remove stowage box	
4	Remove front edge guard (2) from both sides of vehicle in area of front scuff plate (1).	
5	Remove front scuff plate (1) from both sides of vehicle.	
6	Remove rear edge guard (4) from both sides of vehicle in area of rear scuff plate (3).	

7	Remove rear scuff plate (3) from both sides of vehicle.		
8.1	Unclip load anchor cover (8) from both sides of vehicle, unscrew bolt and remove load anchor (8).	Only on model 211.2 and on model 211.0 with code (287a) Through-loading feature	
9	Unclip left and right rear footwell air grate (6) (arrow) and remove		
10	Unclip clips (10) on center tunnel and lay electric wiring harness down to side.		
11	Pull rear floor covering (9) out below left and right B-pillar paneling (7).		
12	Move electric wiring harness (5) for driver and passenger seat adjustment out of rear floor covering (9)		
13	Remove rear floor covering (9)		
14	Install in the reverse order		