


MODEL 211.0 except CODE (287a) Through-loading feature

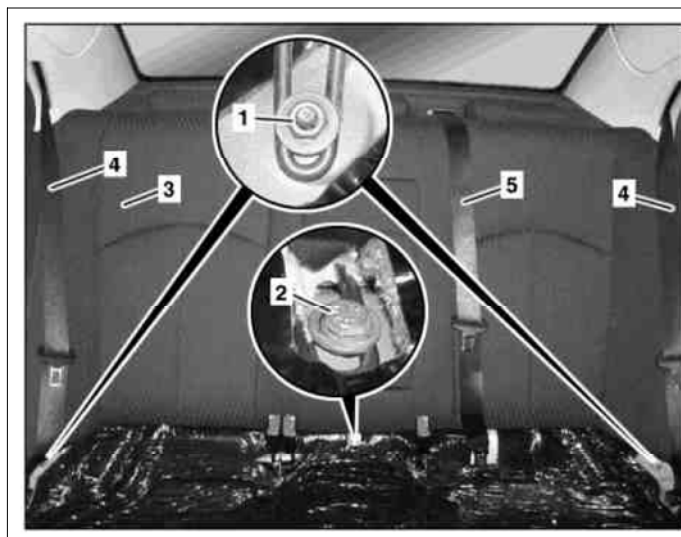


P91.12-2371-08




- 1 Nut
2 Screw
3 Rear seat backrest
7 Bow

- 3 Rear seat backrest
4 Seat belt

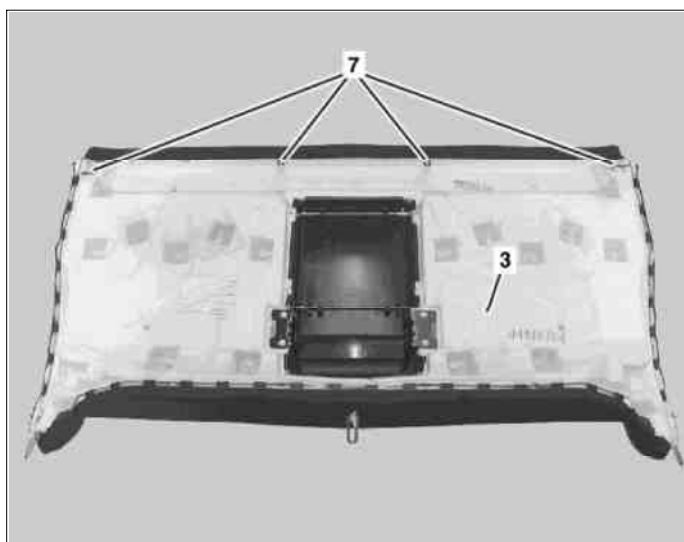- 5 Center seat belt
6 Guide



P91.12-2372-11

	Remove/Install		
1	Remove rear seat cushion		AR91.12-P-1020T
2	Remove nuts (1) on both sides		
3	Remove screw (2)		
4	Lift rear seat backrest (3)		
5	Guide seat belt (4) on both sides underneath the rear seat backrest (3)		
6	Pull out middle seat belt (5) and lock into place		
7	Slide rear seat backrest (3) upward and remove from the brackets (6)	 Installation: Ensure that bow (7) is seated safely in guides (6).	
8	Remove rear seat backrest (3) from the vehicle to the side	 Carefully remove rear seat backrest (3) from the vehicle to prevent damaging the rear door and the entrance area.	
9	Install in the reverse order		