


AR91.12-P-1020T	Remove/install rear seat cushion
-----------------	----------------------------------

MODEL 211.0 except CODE (287a) Through-loading feature

- 1 Rear seat cushion
2 Lock

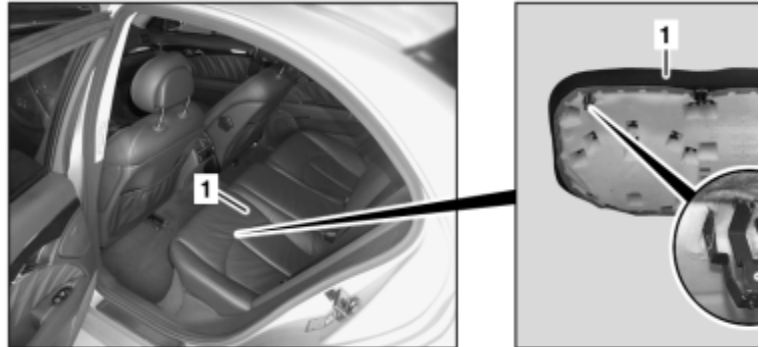

☒ ☒	Remove/Install		
1	Lift rear seat cushion (1) on both sides near the locking mechanism (2)		
2	Press locking mechanisms (2)		
3	Pull rear seat cushion (1) upwards	i Install: Position rear seat cushion (1) over recess clearances and push downwards.	
4	Remove rear seat cushion (1) from vehicle	⚠ Carefully remove rear seat cushion (1) from the vehicle to prevent damaging the rear door and the entrance area.	
5	Install in the reverse order		