

MODEL 203, 209, 211, 220, 230

Illustrated on model 203

- 1 Lug
2 Screwdriver

S17/3 Left front door contact switch
(model 203, 211, 220) or


left door contact switch
(model 209, 230)

S17/4 Right front door contact switch
(model 203, 211, 220) or

right door contact switch
(model 209, 230)

S17/5 Left rear door contact switch
(model 203.0/2, 211, 220)

S17/6 Right rear door contact switch
(model 203.0/2, 211, 220)

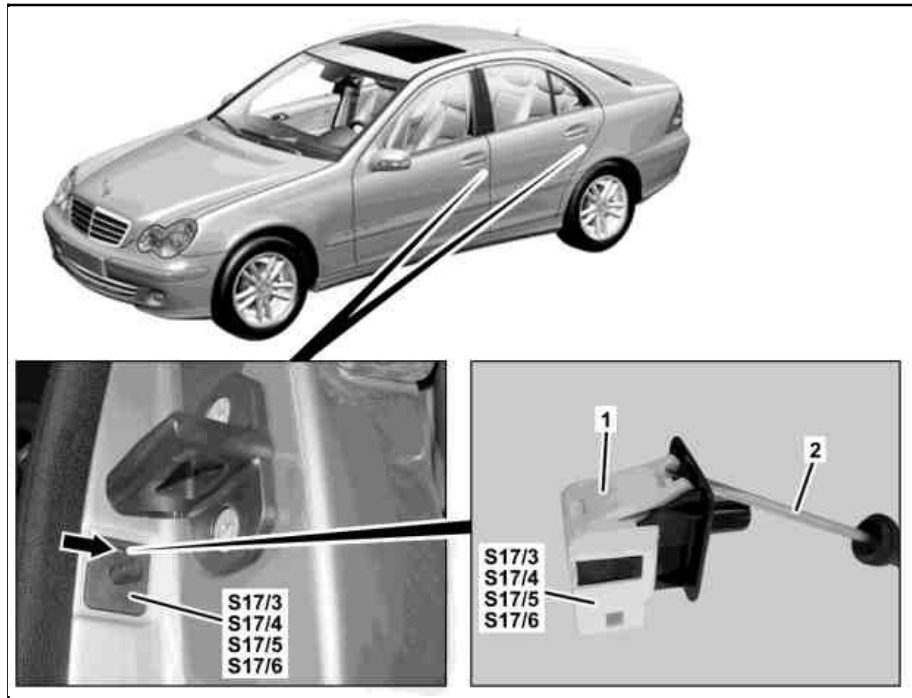

P54.25-6630-06

☒ ☒	Remove/install		
1	Using screwdriver (2) unlock shackle (1) through the opening on the door contact switch (S17/3, S17/4, S17/5 or S17/6) (arrow) and pull out door contact switch (S17/3, S17/4, S17/5 or S17/6) forwards until the electrical connector is accessible	ⓘ When pulling out the door contact switch (S17/3, S17/4, S17/5 or S17/6) ensure that the shackle (1) on the door contact switch (S17/3, S17/4, S17/5 or S17/6) does not break off, otherwise the door contact switch (S17/3, S17/4, S17/5 or S17/6) must be replaced.	
2	Disconnect electrical connector on the door contact switch (S17/3, S17/4, S17/5 or S17/6) and remove door contact switch (S17/3, S17/4, S17/5 or S17/6)		
3	Install in the reverse order		