


ⓘ When the steering wheel is detached the fanfare horns and airbag clock spring contact (A45) must not be twisted otherwise this can be damaged.

1 Unscrew screw (1) .

**i** Bolt (1) is secured to prevent it from falling out.

2 Disconnect steering column switch module (2) complete with fanfare horns and airbag clock spring contact (A45) from jacket tube.

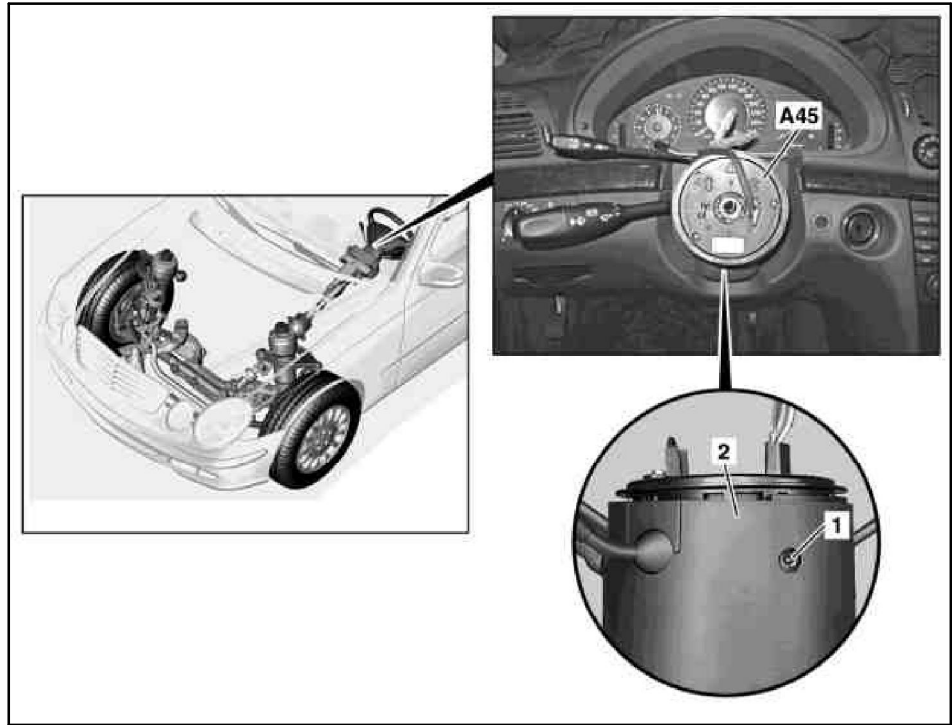

P54.25-3397-06