



P68.10-3812-09

Shown on model 211.0

- | | | | | | |
|---|----------------|---|----------------------|--------|------------------------------|
| 1 | Cover | 5 | Bolts | E17/16 | Left front footwell lamp |
| 2 | Screw | 6 | Clip | N93 | Central gateway control unit |
| 3 | Hood unlocking | 7 | Electrical connector | X11/4 | Data link connector |
| 4 | Release cable | 8 | Air duct | | |

Modification notes

5.7.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

 	Remove/install		
1	Move driver seat all the way down		
2	Unscrew bolt (2)		
3	Unclip clip (6) from cover (1)		
4	Pull engine hood release (3) out of the cover (1), detach release cable (4) and remove hood release (3)		
5	Remove bolts (5)		
6	Fold cover (1) downward	i Installation: Ensure correct connection of the air duct (8).	
7	Slide arresting mechanism at data link connector (X11/4) in the direction of arrow and remove data link connector (X11/4) from cover (1)		
8	Unclip central gateway control unit (N93)		
9	Disconnect electrical connector (7) at the left front footwell lamp (E17/16)		
10	Remove cover (1) out of the footwell		
11	Install in the reverse order		