

## AR32.25-P-1017T Remove/install the suspension strut MODEL 211.08 /09 /28 /29 except CODE (489) Airmatic (semi-active air suspension)

- 2 3 Front axle shaft
- Suspension strut
- 4 Transverse control arm

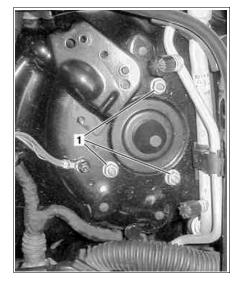

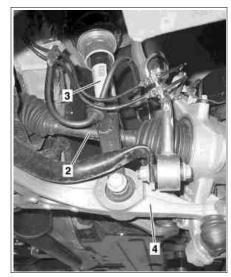

P32.25-2058-02

P32.25-2095-02

18.3.08

## Modification notes

18.3.08 Value modified: Nut, front suspension strut to front end	*BA32.25-P-1001-04B
--	---------------------

XX	Remove/install		
⚠ Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases even sever extremities.	Keep body parts and limbs well clear of moving parts.	AS00.00-Z-0009-01A
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
i Installation	Tighten nuts and bolts of chassis components only when vehicle is in the ready-to-drive condition.		
1	Remove front axle shaft (2)		AR33.30-P-06201
2	Unscrew nuts (1)	Nm	*BA32.25-P-1001-04B
3	Press transverse control arm (4) downwards and remove and remove suspension strut (3)		
4	Install in the reverse order		
5	Check headlamp setting and correct if necessary	After installing new parts	
<b>₩</b> AP	Check and correct headlamp adjustment		AP82.10-P-8260T

## Nm Struts

Number	Designation	Model 211.08/ 09/28/29
BA32.25-P-1001-04B	Nut, front suspension strut to front end Nm	30