


Front

f68 to f71 Fuses

X Direction of travel

F32 Front prefuse

i The front prefuse box is located in the footwell on the passenger side.

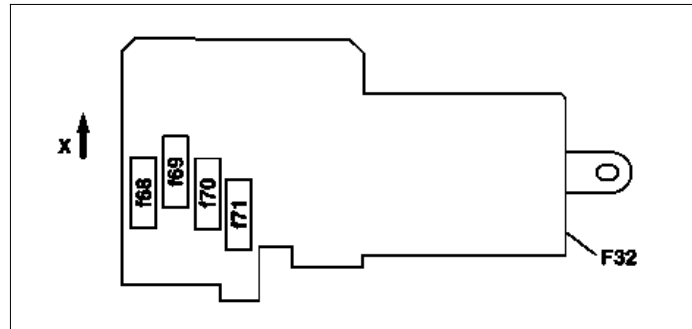


P54.15-2410-10

Rear

f72 to f77 Fuses

F32 Front prefuse

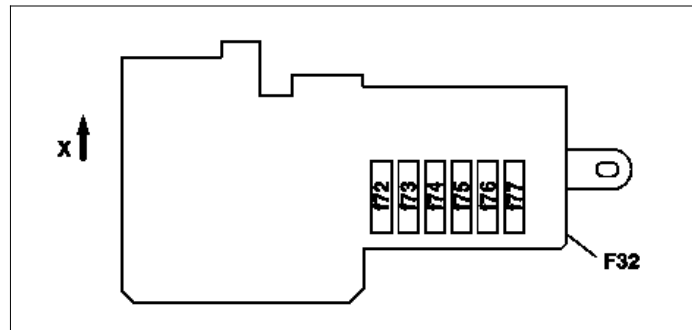

P54.15-2411-10

Fuse	Clamping device	Cable ID (cable fused)	Fused function	Rating in amperes (A)
		80.0 BK	Feed-in: ● Battery (G1)	
f68	30	25.0 RD	Valid for engine 629, 642, 646 EVO: ● Heater booster (R22/3)	200
f69	30	10.0 RD	Valid for engine 629, 642, 646 EVO: ● Glow time output stage (N14/3)	150
f70	-	-	Valid for model 211.2: ● External start terminal point	-
f71	30	10.0 RD	Valid for engine 156, 271, 272, 273: ● AAC with integrated control additional fan motor (M4/7)	150
		12.0 RD	Valid for engine 629, 642, 646 EVO: ● Engine and AC electric suction fan with integrated control	100
f72	30	4.0 RDBU	● Traction system hydraulic unit (A7/3)	50
f73	30	4.0 RDYE	● ESP control unit (N47-5)	40
f74	30	4.0 RD	Valid with code (489) Airmatic (semi-active air suspension): ● AIRmatic relay (K67)	40
f75	30	4.0 RD	● right SAM control unit (N10/11)	40
f76	30	4.0 RDVT	Valid with code (299) PRE-SAFE: ● Right front reversible emergency tensioning retractor (A76/1)	40
f77	30	4.0 RDBU	● Blower motor (M2)	40