



- 1 Cover panel
- 2 Protective cap
- 3 Nut
- 4 Electrical line

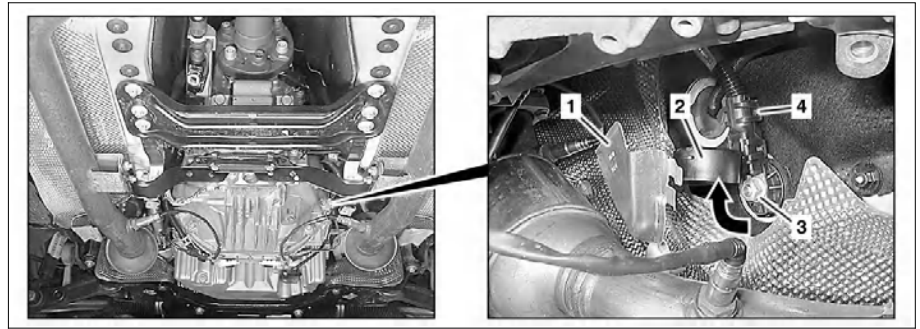

P54.15-2480-04

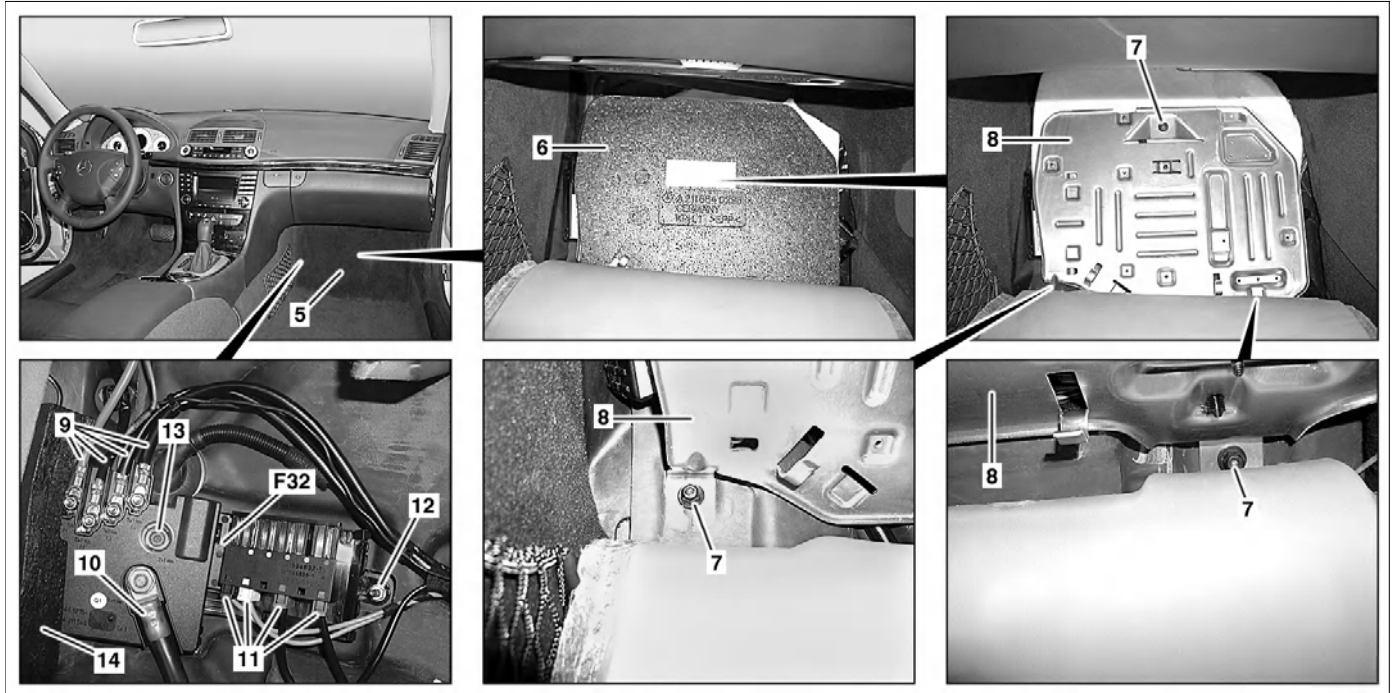

P54.15-2479-09

- 5 Floor covering
- 6 Damping material
- 7 Nut
- 8 Footrest
- 9 Supply lines (red)
- 10 Positive lead (black)
- 11 Fuse holder
- 12 Nut
- 13 Nut
- 14 Support
- F32 Front prefuse

Remove/Install		
1	Disconnect battery ground line	Model 211.0/6 Model 211.2 AR54.10-P-0003T AR54.10-P-0003TA
2.1	Remove rear engine compartment paneling	Model 211.042/043/056/061/065/070/ 076/080/082/083/242/243/256/261/ 265/270/276/280/282/283 Model 211.042/043/061/065/070/076/ 080/082/083/242/243/261/265/270/ 276/280/282/283 AR61.20-P-1105T
2.2	Remove bottom section of soundproofing	Model 211.004/006/016/023/026/028/206/ 216/223/226/606/616 AR94.30-P-5300T
3	Remove cover panel (1)	
4	Clip on protective cap (2) (arrow)	
5	Unscrew nut (3) and detach electrical line (4)	⚠ Install new self-locking nuts (3). Nm *BA54.10-P-1009-01C
6	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the hydraulic hoist and position the four support plates below the hoist support points specified by the vehicle manufacturer. AS00.00-Z-0010-01A
6	Lower vehicle with lifting platform	
7	Fold back floor covering (5) in front passenger footwell	

8	Remove damping material (6) upwards off the footrest (8)		
9	Unscrew nuts (7)		
10	Remove footrest (8) and put down in front passenger footwell		
11	Remove support (14)		
12	Mark installation position of individual supply lines (red) (9)		
13	Detach supply lines (red) (9) at the front prefuse box (F32) and put the supply lines (red) (9) to one side	<p>i Nuts remain attached to supply lines (red) (9).</p> <p>i Installation: Observe installation markings.</p> <p>Nm</p>	*BA54.10-P-1009-01C
14	Detach positive lead (black) (10) and put to one side	<p>Nm</p>	*BA54.10-P-1009-01C
15	Unclip fuse holder (11) at the front prefuse box (F32)	<p>i Number of fuse holders (11) varies depending on equipment configuration.</p> <p>i Installation: Pay attention to color coding of fuse holder (11).</p>	
16	Unscrew nut (12)		
17	Unscrew nut (13) and remove front prefuse box (F32)	<p>Nm</p>	*BA54.10-P-1002-01C
18	Install in the reverse order		

Nm **Battery**

Number	Designation		Model 211
BA54.10-P-1002-01C	Nut, terminal 30 in prefuse box	M8 Nm	7
BA54.10-P-1009-01C	Nut, line connection to front prefuse box	M6 Nm	7
		M8 Nm	14