

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
<b>A9</b>	Refrigerant compressor	17L
<b>A9x1</b>	Refrigerant compressor connector	16K
<b>B4/1</b>	Left fuel level sensor	35L
<b>B4/2</b>	Right fuel level sensor	34L
<b>B4/3</b>	Fuel tank pressure sensor	45L
<b>B11/15</b>	PremAir sensor	18L
<b>B11/15x1</b>	PremAir sensor connector	18K
<b>B37</b>	Accelerator pedal sensor	38L
<b>F32</b>	Front prefuse	21L
<b>F32f71</b>	Fuse 71	20K
<b>F34</b>	Interior fuse box	3L
<b>F34f42</b>	Fuse 42	1K
<b>M1</b>	Starter	16L
<b>M3</b>	Fuel pump (FP)	37L
<b>M4/7</b>	Engine and AC electric suction fan with integrated control	24L
<b>N3/10</b>	ME-SFI [ME] control unit	5A 12A 20A 28A 36A 45A
<b>N10/1</b>	Driver-side SAM control unit with fuse and relay module	5L 12L
<b>N10/2</b>	Rear SAM control unit with fuse and relay module	31L
<b>U828</b>	Valid for super low emission	33F
<b>U913</b>	Not valid for super low emission	33E
<b>W2</b>	Ground (right front, at lamp unit)	18E 24G
<b>W6</b>	Ground (left wheelhouse in luggage compartment)	37E
<b>W15/3</b>	Ground (electronics)	6E
<b>X11/4</b>	Data link connector	11G
<b>X26</b>	Interior and engine wiring harness connector	13G
<b>X30/5</b>	Left voltage distributor (CAN) connector	41L
<b>X30/9</b>	Circuit 15 voltage distributor	28L
<b>X36/3</b>	Fuel pump wiring harness connector	33G
<b>Y58/1</b>	Purge control valve	26L
<b>Y58/4</b>	Activated charcoal filter shutoff valve	43L
<b>Z3/11z1</b>	Circuit 15 connector sleeve (fused)	27G
<b>Z6/49z1</b>	Ground (W2) connector sleeve	17G

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
<b>Z7/38</b>	Circuit 87 M1i connector sleeve	7G 29G
<b>Z7/39</b>	Circuit 87 M2i connector sleeve	9G 19G 25G 43G
<b>Z92</b>	TNA-signal connector sleeve	11E