



P88.50-2687-07

1 **Trunk lid handle**
2 **Bolts**

3 **Trunk lid**
4 **Electrical connectors**

5 **Bowden cable**
6 **Lock cylinder**

	Remove/install		
Danger!	Risk of injury caused by fingers being jammed or pinched when removing, installing or aligning hoods, doors, trunk lid/rear-end door or sliding roof.	When moving components, ensure that no body parts or limbs are within the operating range of moving parts.	AS00.00-Z-0011-01A
1	Remove outer paneling from trunk lid (3)	Vehicles with production date up to 27.11.02 Vehicles with production date as of 28.11.02	AR88.50-P-5080T AR88.50-P-5080TA
2	Unscrew bolts (2)		*BA88.50-P-1016-01A
3	Remove trunk lid handle (1) from trunk lid (3) until electrical connectors (4) are accessible		
4	Disconnect electrical connectors (4) from trunk lid handle (1)		
5	Unhook Bowden cable (5) from trunk lid handle (1) and remove trunk lid handle (1).		
6.1	Remove lock cylinder (6)	Only when replacing trunk lid handle (1).	AR88.50-P-5061T
7	Install in the reverse order		

Trunk lid

Number	Designation	Model 211
BA88.50-P-1016-01A	Bolt, handle plate to trunk lid	9