


P88.50-2412-09

1 Outer paneling
2 Inner paneling
3 Nut

4 Clip
5 Trunk lid

6 Plug
7 Mounting holes

| | Remove | | |
|-----|--|---|-----------------|
| 1 | Remove license plate from trunk lid (5) | | |
| 2 | Remove inner paneling (2) from trunk lid (5). | | AR68.30-P-8150T |
| 3 | Unscrew nuts (3) | | |
| 4 | Unclip clips (4) on outer paneling (1) from mounting holes (7) | | *110589035900 |
| 5 | Remove outer paneling (1) downward | | |
| | Install | | |
| 6.1 | Check mounting holes on bottom of trunk lid (5) for missing plugs (6), install plugs (6) if necessary. | On vehicles with mounting holes at bottom of trunk lid (5). | |
| 7 | Position outer paneling (1) to trunk lid (5) from bottom and clip clips (4) into mounting holes (7). | Clips (4) should completely catch on the trunk lid (5) to prevent moisture from getting into the vehicle. Replace damaged clips (4). | |
| 8 | Screw nuts (3) | | |
| 9 | Install inner paneling (2) on trunk lid (5) | | AR68.30-P-8150T |
| 10 | Install license plate on trunk lid (5) | | |

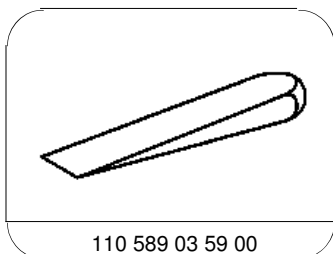

110 589 03 59 00

Mounting wedge