







P88.50-2508-07

- 1 Lock cylinder
- 2 Trunk lid handle
- 3 Emergency key

- 4 Lock housing
- 5 Cylinder lock housing

- 6 Allen wrench, 1.5 mm
- 7 Retainer tab

 Remove			
1	Remove trunk lid handle (2) with lock cylinder (1)		AR88.50-P-5060T
2	Insert emergency key (3) into lock cylinder (1)		
3	Turn lock cylinder (1) 45° counterclockwise with emergency key.	 The opening (arrow) in the lock housing (4) should coincide with the corresponding removal hole in the lock cylinder housing (5).	
4	Insert Allen wrench, SW 1.5 (6) into opening (arrow) and press retaining lug (7) on lock cylinder (1).	 Unlocks lock cylinder (1).	
5	Pull lock cylinder (1) on emergency key (3) out of lock cylinder housing (5)		
 Install			
6	Insert lock cylinder (1) with inserted emergency key (3) into lock cylinder housing (5) and turn until lock cylinder (1) locks in lock cylinder housing (5).	 Carefully turn lock cylinder (1) in lock cylinder housing (5) to prevent damaging the retaining lug (7).  While locking press lock cylinder (1) against spring located in lock cylinder housing (5)	
7	Install trunk lid handle (2) with lock cylinder (1)		AR88.50-P-5060T