


MODEL 211.080 /082 /084 /087 /089 /092 /280 /282 /284 /287 /289 /292 except CODE (489) Airmatic (semi-active air suspension)

- 1 Nuts
- 2 Front axle shaft
- 3 Suspension strut
- 4 Transverse control arm



P32.25-2058-02

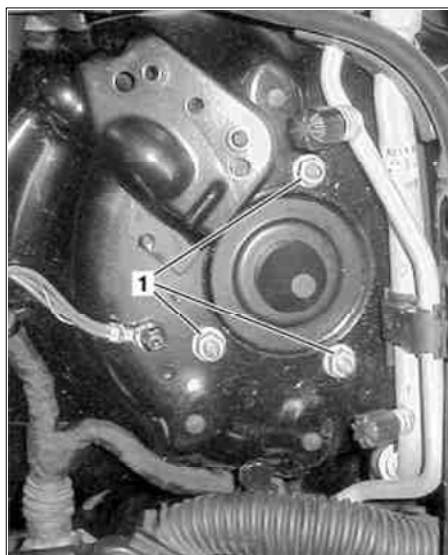

P32.25-2095-02

	Remove/install		
⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
⚠ Danger!	Risk of injury caused by moving parts that can pinch, crush or, in extreme cases even sever extremities.	Keep all body parts and limbs away from moving mechanical components.	AS00.00-Z-0009-01A
	Notes on self-locking nuts and bolts	All models	AH00.00-N-0001-01A
i Installation	Tighten nuts and bolts of chassis components only when vehicle is in the ready-to-drive condition.		
1	Unscrew nuts (1)	Nut, front suspension strut to front end	*BA32.25-P-1001-04B
2	Remove front axle shaft (2)		AR33.30-P-0620I
3	Press transverse control arm (4) downwards and remove and remove suspension strut (3)		
4	Install in the reverse order		
5	Check headlamp adjustment	i After installation of new parts.	
	Check and correct headlamp adjustment		AP82.10-P-8260T

Struts

Number	Designation	Model 211.08/ 09/28/29
BA32.25-P-1001-04B	Nut, front suspension strut to front end	Nm 25