


AR33.20-P-0500-01VM	Pressing out and attaching follower joint at steering knuckle		
---------------------	---	--	--

Modification notes


11.12.06	Self-locking nut, upper wishbone follower joint to steering knuckle	Model 211	*BA33.20-P-1018-01A
----------	---	-----------	---------------------

Nm Wheel location, hub

Number	Designation	Model
		211.08/09/ 28/29
BA33.20-P-1018-01A	Self-locking nut, upper wishbone follower joint to steering knuckle	Stage 1 Nm 20
		Stage 2 4° 90

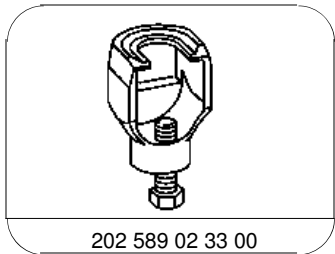


Puller

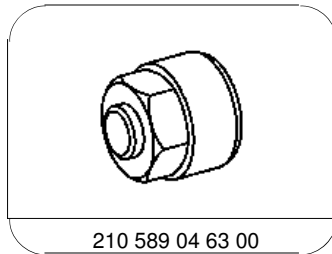

Thrust washer M 10x1.5

Pushing off

- 1 Unscrew self-locking nut (1) of supporting joint (8) to transverse control arm (6).
- 2 Mount thrust piece.
- 3 Use puller (09) to pry off supporting joint (8).
- 4 Remove puller (09) and thrust piece.

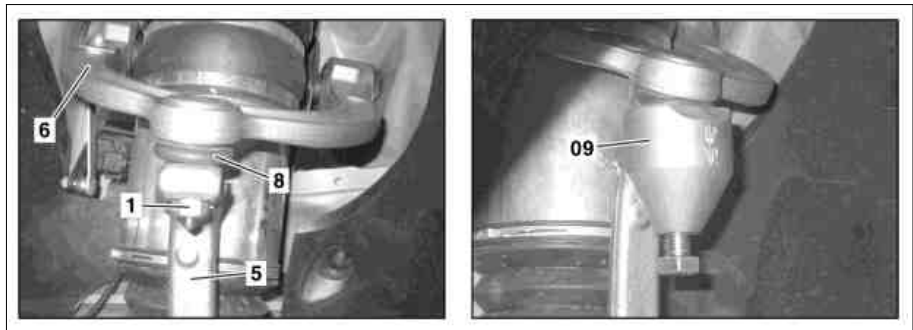

P33.20-2092-04

Install

- 5 Clean tapered connection.
 The cone and thread must be free of grease and oil
- 6 Replace self-locking nut and tighten