



P83.25-2102-07

 
1 Electrical connector
2 Blower base

3 Bolt
4 Electrical connector

A32m1 Blower motor
A32n1 Blower regulator

Modification notes

5.7.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

	Remove/install		
1	Remove cover below right instrument panel		AR68.10-P-1520T
2	Disconnect electrical connector (1)		
3	Unscrew screws from blower base (2)		
4	Remove blower base (2)		
5	Disconnect electrical connector (4) of blower motor (A32m1) from blower regulator (A32n1)		
6	Unscrew screw (3) and hidden screw (arrow) and remove blower regulator (A32n1)		
7	Install in the reverse order		
8	Perform a function test		