


**MODELS 211.0 /2**  
 with CODE (401a) Front luxury seat, incl. heated seat and seat ventilation  
 with CODE (872) Electrically heated left and right rear seats  
 with CODE (873) Electrically heated left and right front seats  
**MODEL 211.6 with CODE (873) Electrically heated left and right front seats**

Shown on model 211.0

- 1 Front entrance paneling
- 2 Front edge guard
- 3 Rear entrance paneling
- 4 Rear edge guard

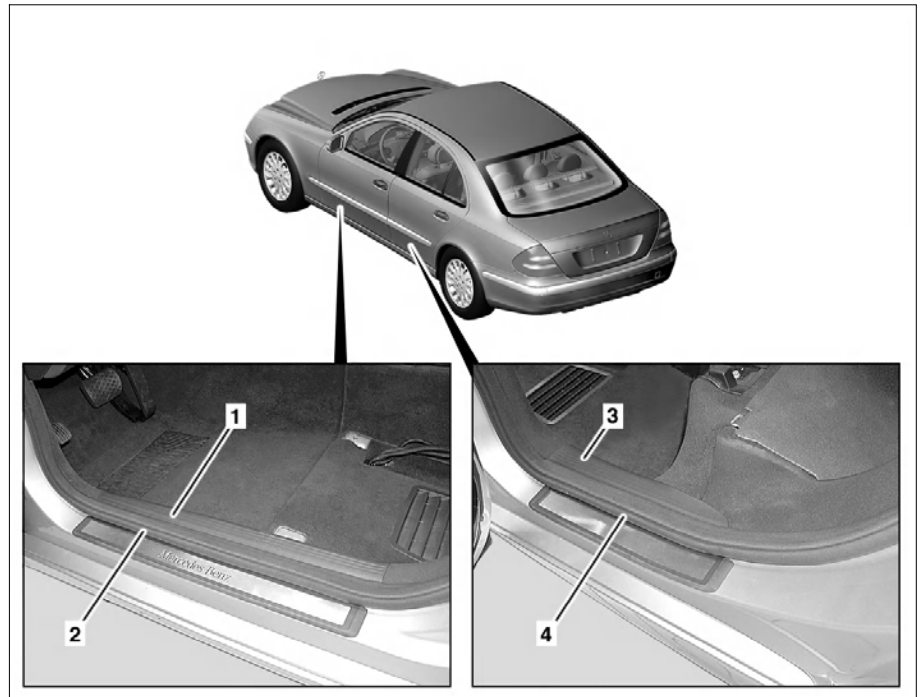


P68.20-2619-06

Shown on model 211.0

- 5 Wiring harness
- 6 Footwell air grate, rear
- 7 Rear floor covering
- 8 B-pillar paneling
- 9 Electrical connector


N25/7 HS and seat ventilation control unit

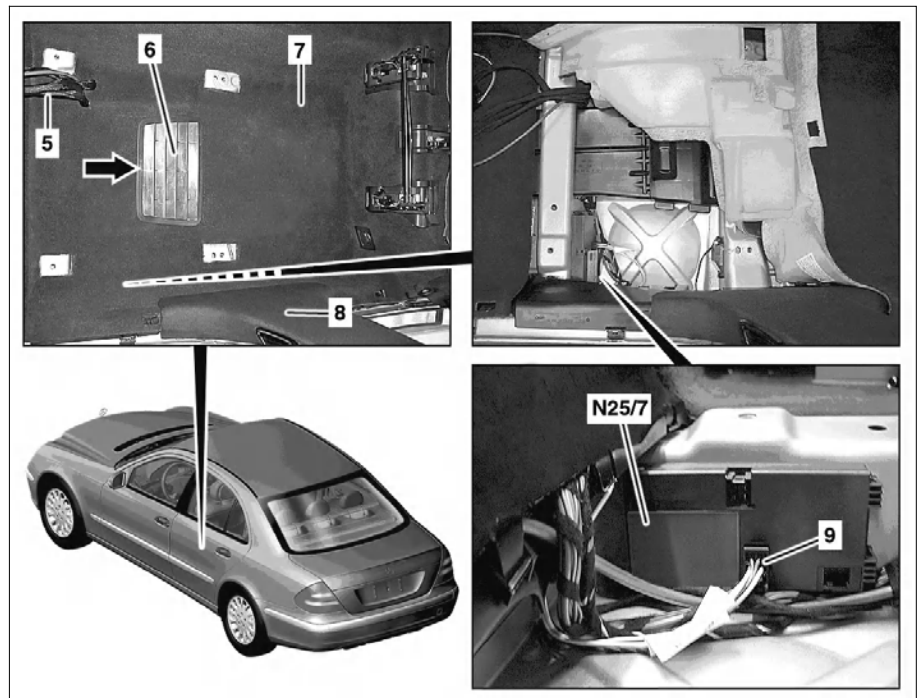

P91.30-2090-06

☒ ☒	Remove/Install		
⚠	Notes on avoiding damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Remove left front seat		AR91.10-P-1000T
2	Remove front edge guard (2) in area of front scuff plate (1)		
3	Remove front scuff plate (1)		
4	Remove rear edge guard (4) in area of rear scuff plate (3)		
5	Remove rear scuff plate (3)		

6	Unclip rear footwell air grate (6) (arrow) and remove		
7	Pull rear floor covering (7) forward under the B-pillar paneling (8)		
8	Lift up rear passenger compartment floor covering (7).		
9	Guide electrical wiring harness (5) out from the rear floor covering (7)		
10	Disconnect electrical plug (9)		
11	Using an assembly wedge, unclip HS and seat ventilation control unit (N25/7) on one side and remove	<p><b>i</b> Do not contaminate or damage heat conducting foils.</p> <p><b>S</b></p>	<a href="#">*110589035900</a>
12.1	Remove protective foil above the heat conducting foils on the HS and seat ventilation control unit (N25/7)	Only when replacing the HS and seat ventilation control unit (N25/7).	
13	Install in the reverse order		

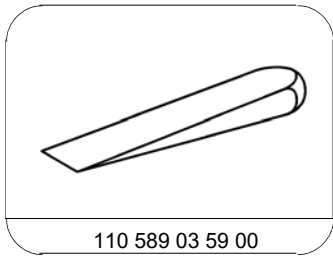

110 589 03 59 00

Mounting wedge