


MODEL 211.0 /2 /6

Front control and operating unit

- 1 Center air outlet
- 2 Bolts
- 3 Electrical connectors
- 4 Electrical connector

N22 AAC [KLA] control and operating unit (except code (581b) Comfort automatic air conditioning)


N22/7 Comfort AAC [KLA] control and operating unit (with code (581b) Comfort automatic air conditioning)

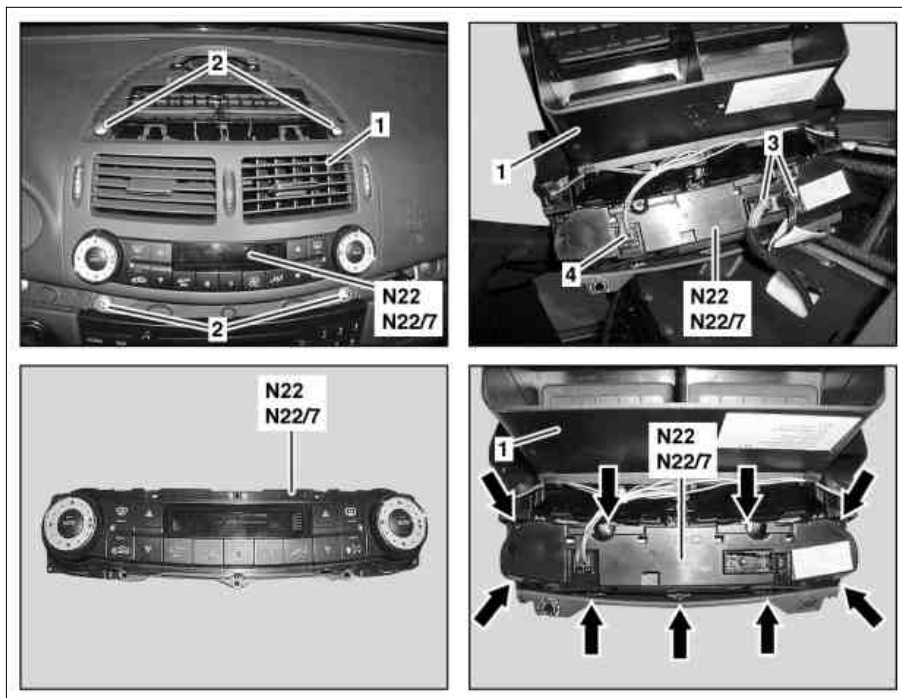

P83.25-2099-06

Modification notes

5.7.06	"Disconnect/connect battery ground line" removed		
--------	--	--	--

Remove/install		
	Notes on avoiding damage to electronic components due to electrostatic discharge	AH54.00-P-0001-01A
1	Remove loudspeaker in instrument panel	AR82.62-P-7833T
2	Remove right trim strip on instrument panel	AR68.10-P-1180T
3	Remove bolts (2)	
4	Remove AAC [KLA] control and operating unit (N22) or comfort AAC [KLA] control and operating unit (N22/7) from instrument panel together with center air outlet (1) until electrical connectors (3, 4) are accessible	
5	Disconnect electrical connectors (3, 4)	
6	Unscrew bolts (arrows).	
7.1	Remove AAC [KLA] control and operating unit (N22) or comfort AAC [KLA] control and operating unit (N22/7) from center air outlet (1)	Only when replacing AAC [KLA] control and operating unit (N22) or comfort AAC [KLA] control and operating unit (N22/7).
8	Install in the reverse order	