


MODEL 219.3

with CODE (433) Left dynamic seat, incl. multicontour seat
with CODE (434) Right dynamic seat, incl. multicontour seat

- 1 Soundproofing
- 2 Bracket
- 3 Pneumatic lines
- 4 Electrical connector
- 5 Vent line

M40/1 Pneumatic pump for dynamic seat control

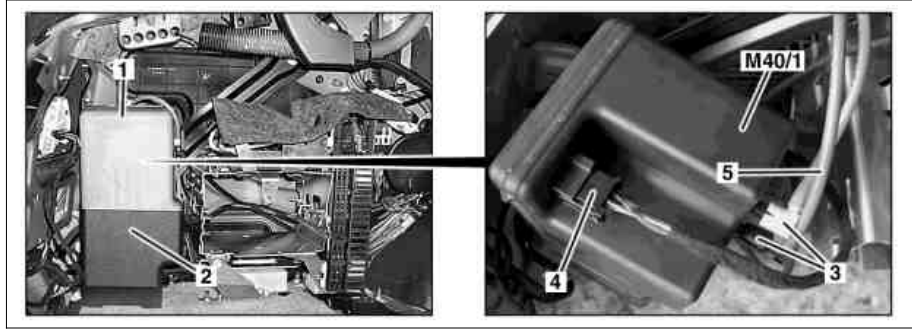


P91.25-2268-04

Modification notes

21.11.06	Special tool added	Step 5	
----------	--------------------	--------	--

			Remove/install	
			1 Remove side paneling in left side of trunk	AR68.30-P-4800TX
			2 Fold up soundproofing (1) from pneumatic pump for dynamic seat control (M40/1)	
			3 Remove vent line (5) from soundproofing (1)	
			4 Disconnect electrical connector (4)	
			5 Seal off pneumatic lines (3) of pneumatic pump for dynamic seat control (M40/1)	*000589043700
			6 Remove pneumatic pump for dynamic seat control (M40/1) with soundproofing (1) upwards out of bracket (2)	
			7 Remove strut in front of overpressure reservoir for dynamic seat control	Only when installing a new pneumatic pump for dynamic seat control (M40/1), on vehicles up to 31.8.06 AR91.25-P-1570TX
			8 Install new pneumatic wiring harness for dynamic seat control pneumatic pump (M40/1)	Only when installing a new pneumatic pump for dynamic seat control (M40/1), on vehicles up to 31.8.06 AR91.25-P-1580-01T
			9 Install in the reverse order	
			10 Activate pneumatic pump for dynamic seat control (M40/1) AD Connect STAR DIAGNOSIS and read out fault memory	After installing new pneumatic pump for dynamic seat control (M40/1). AD00.00-P-2000-04A
			11 Carry out function check	

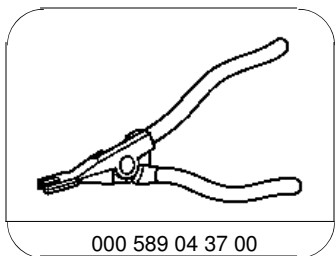

Pliers