


TRANSMISSION 722.6 in MODEL 211.0 /2

TRANSMISSION 722.9 in MODEL 211.0

- 1a Locking plate
- 1b Locking plate
- 2 Shift rod
- 3 Range selector lever
- 4 Intermediate lever
- 5 Socket
- 6 Grub screw
- 7 Rod head

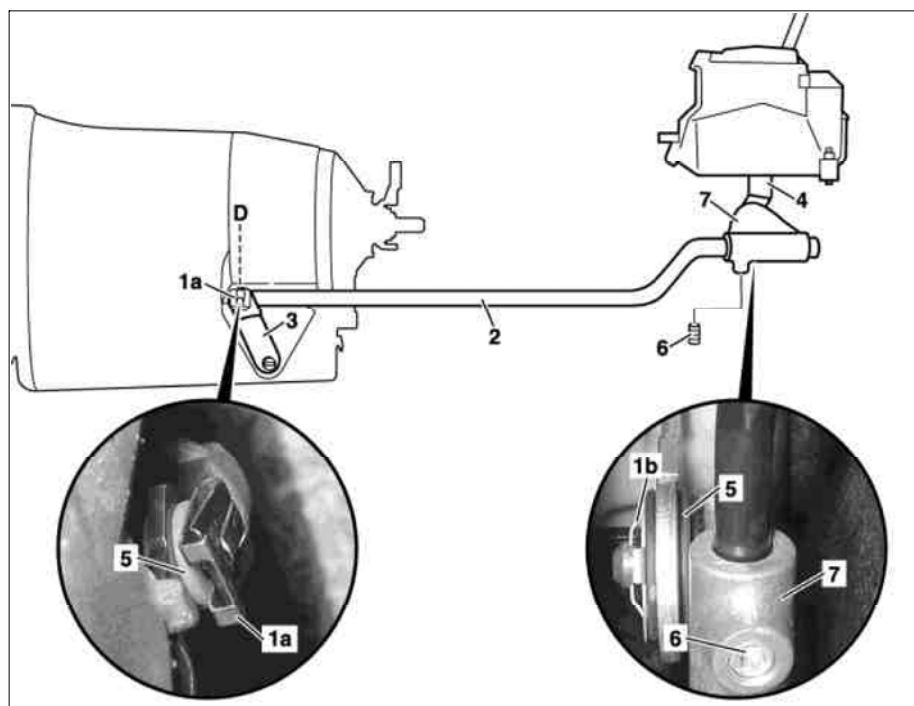

P27.60-2244-06

	Remove/Install		
Danger!	Risk of death. Death may result if vehicle slips or topples from the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
	The vehicle must be horizontal	Place the vehicle on the lifting platform	
1	Move selector lever to position "D".		
2.1	Remove rear part section of bottom part of noise encapsulation	Vehicles with diesel engines	AR94.30-P-5300T
2.2	Remove rear part section of engine compartment paneling	Vehicles with gasoline engines	AR61.20-P-1105T
3	Unclip locking plate (1a) using a screwdriver and unhinge shift rod (2) at range selector lever (3)		
4	Detach locking plate (1b) with needle nose pliers vertically toward bottom and unhinge shift rod (2) at intermediate lever (4)		
5	Take out shift rod (2)		
	Inspect		
6	Check locking plates (1a, 1b) and sockets (5), replace if required		
7	Install in the reverse order		
	Adjusting		
8	Unscrew grub screw (6) from head (7)		
9	Move selector lever and range selector lever (3) into position "D"		
10	Screw new grub screw (6) into head (7)	Counterhold head (7) when tightening the grub screw. Do not move range selector lever (3) and intermediate lever (4) out of position "D". Bolt in rod head	*BA27.60-P-1001-04A
11	Perform function check		
12.1	Install rear part section of bottom part of noise encapsulation	Vehicles with diesel engines	AR94.30-P-5300T
12.2	Install rear part section of engine compartment paneling	Vehicles with gasoline engines	AR61.20-P-1105T

Tightening torques for shift rod

Number	Designation	Transmission 722.6	Transmission 722.9
BA27.60-P-1001-04A	Bolt in rod head M8B10 Nm	12	12