


MODEL 211.0 except CODE (287a) Through-loading feature

- 1 Wiring connector
- 2 Bolts
- 3 Bolts
- 4 Head restraint mechanism

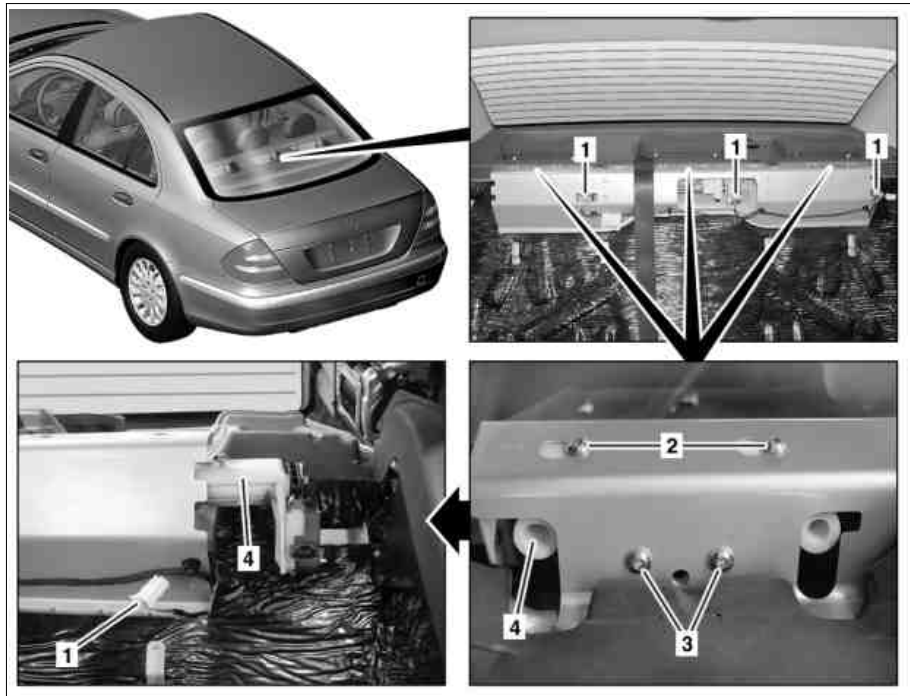

P91.16-2137-06

☒ ☒	Remove/install		
1	Remove rear backrest		AR91.12-P-1620T
2	Remove rear head restraint		AR91.16-P-1770T
3	Disconnect the electrical connector (1).		
4	Undo screws (2) of head restraint mechanism (4)	i Screws (2) remain in head restraint mechanism (4).	
5	Unscrew screws (3) from head restraint mechanism (4)		
6	Remove head restraint mechanism (4)		
7	Install in the reverse order		
8	Perform function check	i Operate "Fold in head restraint" switch. See owner's manual	