


TRANSMISSION 722.6 in MODEL 211.0 /2

TRANSMISSION 722.9 in MODEL 211.0 /2

 


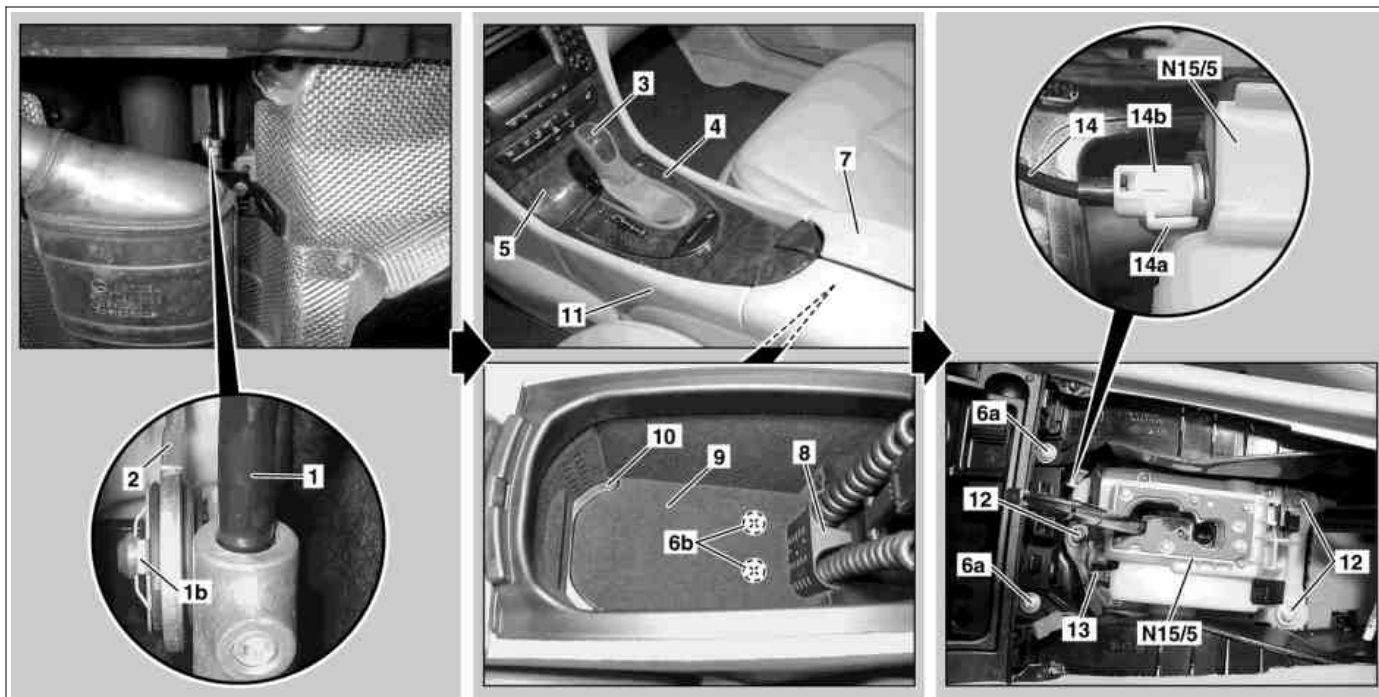


P27.60-2246-09

- 1 Shift rod
 1b Locking plate
 2 Intermediate lever
 3 Selector lever handle
 4 Cover
 5 Ashtray housing

- 6a Bolts
 6b Bolts
 7 Center arm rest
 8 Cable retainer
 9 Inlaid section
 10 Floor panel
 11 Center console

- 12 Bolts
 13 Electrical connector
 14 Ignition lock control cable
 14a Locking plate
 14b Clutch
 N15/5 Electronic selector lever module control unit

	Remove/install		
⚠ Danger!	Risk of death caused by vehicle slipping or toppling off of the lifting platform.	Align vehicle between the columns of the lifting platform and position the four support plates at the lifting platform support points specified by the vehicle manufacturer.	AS00.00-Z-0010-01A
	Notes on self-locking nuts and bolts		AH00.00-N-0001-01A
1	Raise vehicle		
2.1	Remove rear part section of bottom part of noise encapsulation	on diesel engines	AR94.30-P-5300T
2.2	Remove rear part section of engine compartment paneling	with gasoline engine	AR61.20-P-1105T
3	Unhinge shift rod (1) at intermediate lever (2) of electronic selector lever module control unit (N15/5)	 Pull locking plate (1b) off shift rod (1) using needle nose pliers.	
4	Remove selector lever handle (3) with cover (4).		AR27.60-P-0905R
5	Remove cover (4) at selector lever.		
6	Cover selector lever gate of electronic selector lever module control unit (N15/5) with a cloth.	 Objects that fall into the electronic selector lever module control unit (N15/5) can cause damage.	
7	Remove ashtray housing (5) on center console (11)		AR68.20-P-2400T
8	Remove bolts (6a)		
9	Open center armrest (7).	With front folding armrest with stowage compartment code 303	
10	Remove cable retainer (8).	With telephone "Handy", UPCI system code 388 or Tele-Aid fixed installation telephone code 383	
11	Remove inlaid section (9) and floor panel (10).		
12	Unscrew bolts (6b).		

13	Remove center console (11) vertically upward and place to the side.	Do not disconnect electrical connectors. Installation: Do not trap electrical feed cables.	
14	Remove bolts (12)	Bolt, floor shift to body	*BA27.60-P-1001-02A
15	Disconnect electrical connector (13) at electronic selector lever module control unit (N15/5).		
16	Detach ignition lock control cable (14) from connection fitting of electronic selector lever module control unit (N15/5).	Raise locking catch (14a) and press connector (14b) against force of spring into electronic selector lever module control unit (N15/5), turn connector (14b) 90° and detach ignition lock control cable (14).	
17	Remove electronic selector lever module control unit (N15/5).	Installation: Do not jam any electric cables in between.	
18	Install in the reverse order		
19	Read out fault memory Connect STAR DIAGNOSIS and read out fault memory	STAR DIAGNOSIS diagnosis system	AD00.00-P-2000-04A *WH58.30-Z-1048-13A
20	Perform a function test	If in poor condition: ↓ Adjust shift rod.	AR27.60-P-0990T

Tightening torques for floor shift

Number	Designation		Trans- mission 722.6	Trans- mission 722.9
BA27.60-P-1001-02A	Bolt, floor selector to body	Nm	6	6

Commercially available tools

Number	Designation	
WH58.30-Z-1048-13A	STAR DIAGNOSIS diagnosis system, Compact Passenger Car	6511 1801 00