

Item	Designation	Coordinates
B4/1	Left fuel level sensor	27L
B4/2	Right fuel level sensor	26L
B4/3	Fuel tank pressure sensor	19L
B37	Accelerator pedal sensor	20L
F32	Front prefuse	33L
F32f71	Fuse 71	32K
F34	Interior fuse box	3L
F34f42	Fuse 42	1K
G3/5	Left O2 sensor downstream of TWC [KAT]	13L
G3/5x1	Left O2 sensor downstream of TWC [KAT] connector	12J
G3/6	Right O2 sensor downstream of TWC [KAT]	11L
G3/6x1	Right O2 sensor downstream of TWC [KAT] connector	10J
M3	Fuel pump (FP)	29L
M4/7	Engine and AC electric suction fan with integrated control	36L
M33	Electric air pump	44L
N3/10	ME-SFI [ME] control unit	4A 12A 20A 28A 36A 46A
N10/1	Driver-side SAM control unit with fuse and relay module	6L 40L
N10/1f43	Fuse 43	5K
N10/2	Rear SAM control unit with fuse and relay module	24L
S16/6	Kickdown switch	31L
U791	The electrical switching contact of the kickdown switch (S16/6) is being discontinued. Its function is being assumed by the accelerator pedal sensor (B37).	29D
W2	Ground (right front, at lamp unit)	36G
W6	Ground (left wheelhouse in luggage compartment)	29E
W11/3	Ground (engine, left)	44H
W15/3	Ground (electronics)	3E
X11/4	Data link connector	40E
X26	Interior and engine wiring harness connector	10H
X30/5	Left voltage distributor (CAN) connector	46L
X36/3	Fuel pump wiring harness connector	26H
Y58	Activated charcoal filter shutoff valve	16L
Y58/1	Purge control valve	9L
Z6/26	Sensor supply connector sleeve	13E

Item	Designation	Coordinates
Z6/47z2	Ground (W15/2) connector sleeve	30G 41G
Z7/35	Circuit 87 M1e connector sleeve	17G
Z7/38	Circuit 87 M1i connector sleeve	5G 22G
Z7/39	Circuit 87 M2i connector sleeve	10E 39G
Z92	TNA-signal connector sleeve	38G