

**Dokumentnummer :** pe07.61-p-2101-99dc  
**Dokumenttitel :** Wiring diagram for ME-SFI [ME] gasoline injection and ignition system control unit

<b>Kurzbezeichnung:</b>	<b>Bezeichnung:</b>	<b>Position:</b>
A0	Color code key	56 L
B37	Accelerator pedal sensor	38 L
B4/1	Left fuel level sensor	26 L
B4/2	Right fuel level sensor	25 L
B4/3	Fuel tank pressure sensor	30 L
F32	Front prefuse	18 L
F32f71	Fuse 71	18 K
F34	Interior fuse box	2 L
F34f42	Fuse 42	2 K
M3	Fuel pump (FP)	27 L
M4/7	Engine and AC electric suction fan with integrated control	20 L
N10/1	Driver-side SAM control unit with fuse and relay module	4 L
N10/1	Driver-side SAM control unit with fuse and relay module	16 L
N10/2	Rear SAM control unit with fuse and relay module	23 L
N118/2	CNG control unit	44 L
N3/10	ME-SFI [ME] control unit	4 A
N3/10	ME-SFI [ME] control unit	12 A
N3/10	ME-SFI [ME] control unit	20 A
N3/10	ME-SFI [ME] control unit	27 A
N3/10	ME-SFI [ME] control unit	36 A
N3/10	ME-SFI [ME] control unit	44 A
S40/3	Clutch pedal switch	33 L
U12	Valid for left-hand drive vehicles	32 D
U13	Valid for right-hand drive vehicles	32 D
U24	Valid for manual transmission	31 D
U748	Valid for M271 CNG	4 F
U748	Valid for M271 CNG	13 C
U748	Valid for M271 CNG	43 E
U75	Valid for gasoline engines	10 D
U943	Valid for South Korea	7 C
U943	Valid for South Korea	28 D
W15/1	Ground (right footwell)	34 L
W15/2	Ground (left footwell)	34 L
W15/3	Ground (electronics)	5 E
W2	Ground (right front, at lamp unit)	20 H
W6	Ground (left wheelhouse in luggage compartment)	28 E
X11/4	Data link connector	13 G
X26	Interior and engine wiring harness connector	15 G
X30/5	Left voltage distributor (CAN) connector	41 L


**Dokumentnummer :** pe07.61-p-2101-99dc


**Dokumenttitel :** Wiring diagram for ME-SFI [ME] gasoline injection and ignition system control unit

**Kurzbezeichnung:Bezeichnung:**


**Position:**

X30/9	Circuit 15 voltage distributor	48 L
X36/3	Fuel pump wiring harness connector	24 G
Y58	Activated charcoal filter shutoff valve	29 L
Y58/1	Purge control valve	36 L
Z3/11	Circuit 15 (fused) connector sleeve	49 G
Z4/3z1	Tml. 30 connector sleeve	4 G
Z6/33	Diagnostic lines connector sleeve	13 E
Z6/46	Ground (W15/1) connector sleeve	33 G
Z6/46	Ground (W15/1) connector sleeve	33 E
Z6/47	Ground (W15/2) connector sleeve	33 G
Z6/47	Ground (W15/2) connector sleeve	33 E
Z6/48	Ground (W15/3) connector sleeve	7 E
Z7/36	Circuit 87 M2e connector sleeve	15 E
Z7/38	Circuit 87 M1i connector sleeve	5 G
Z7/39	Circuit 87 M2i connector sleeve	9 E
Z7/39	Circuit 87 M2i connector sleeve	28 G
Z7/39	Circuit 87 M2i connector sleeve	35 G
Z92	TNA-signal connector sleeve	15 E

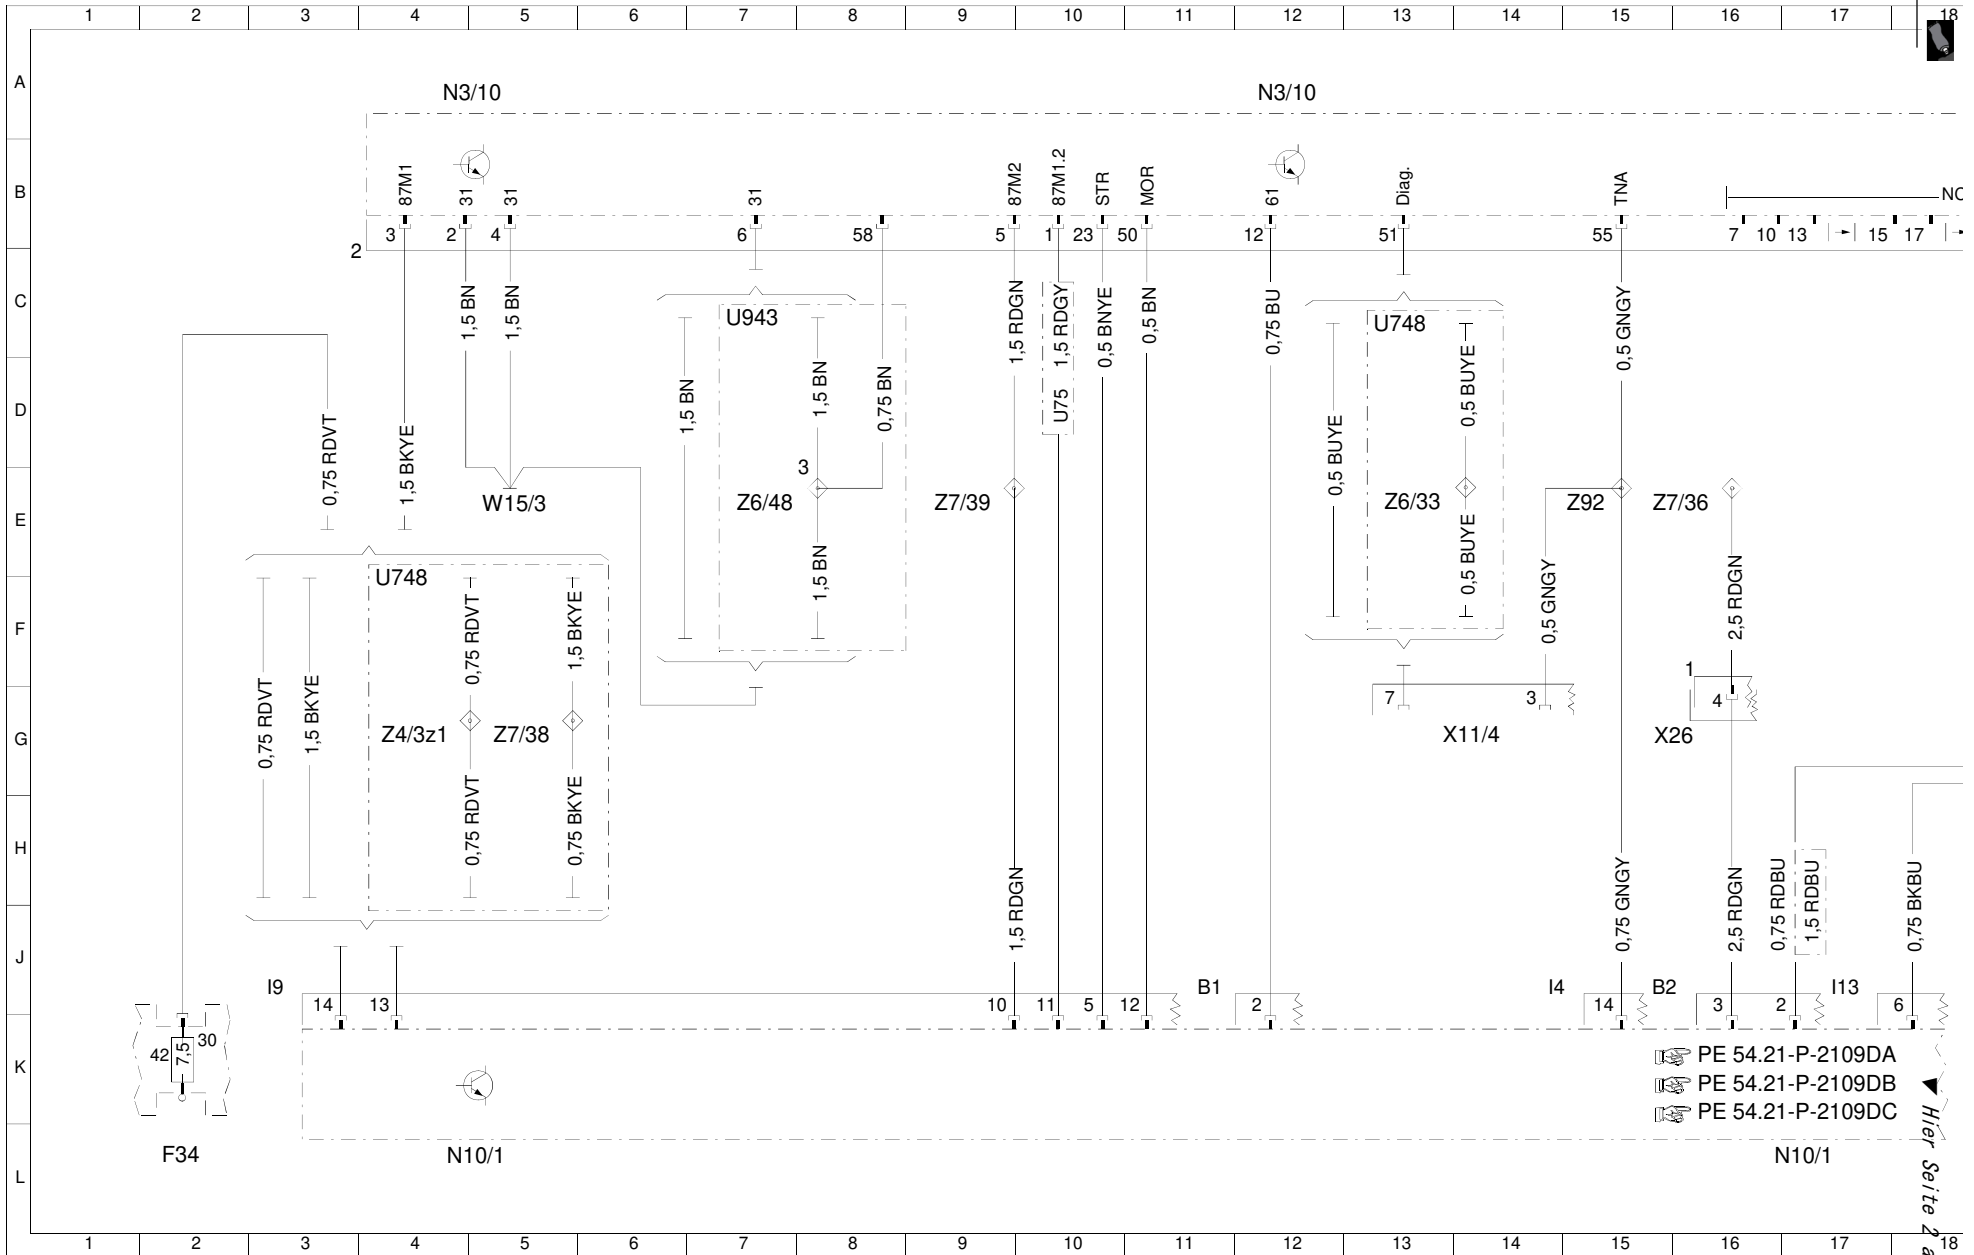

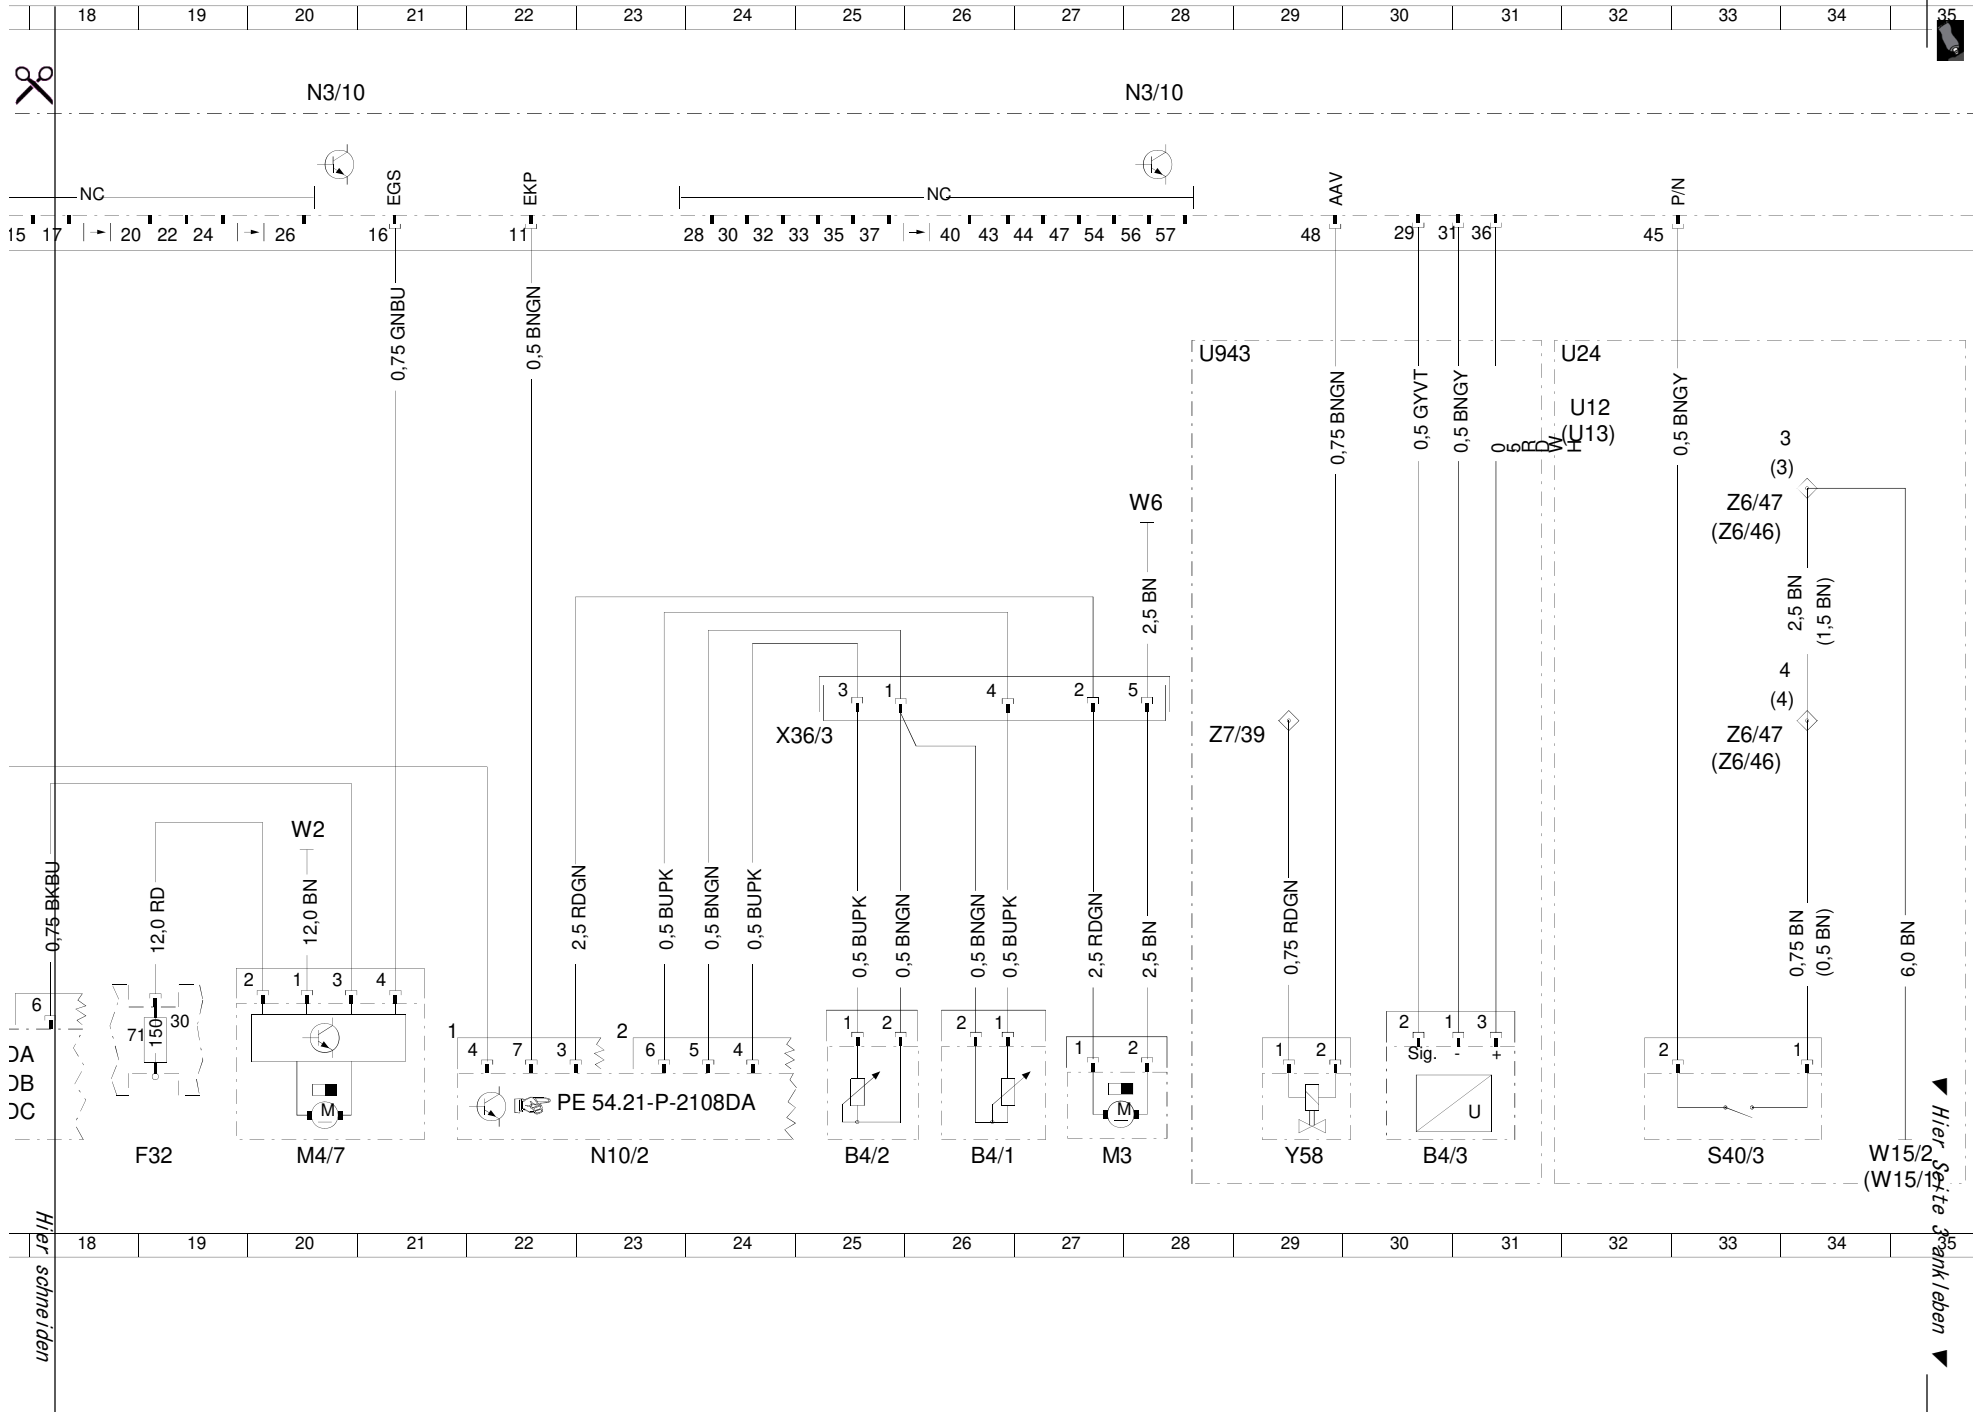

35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52

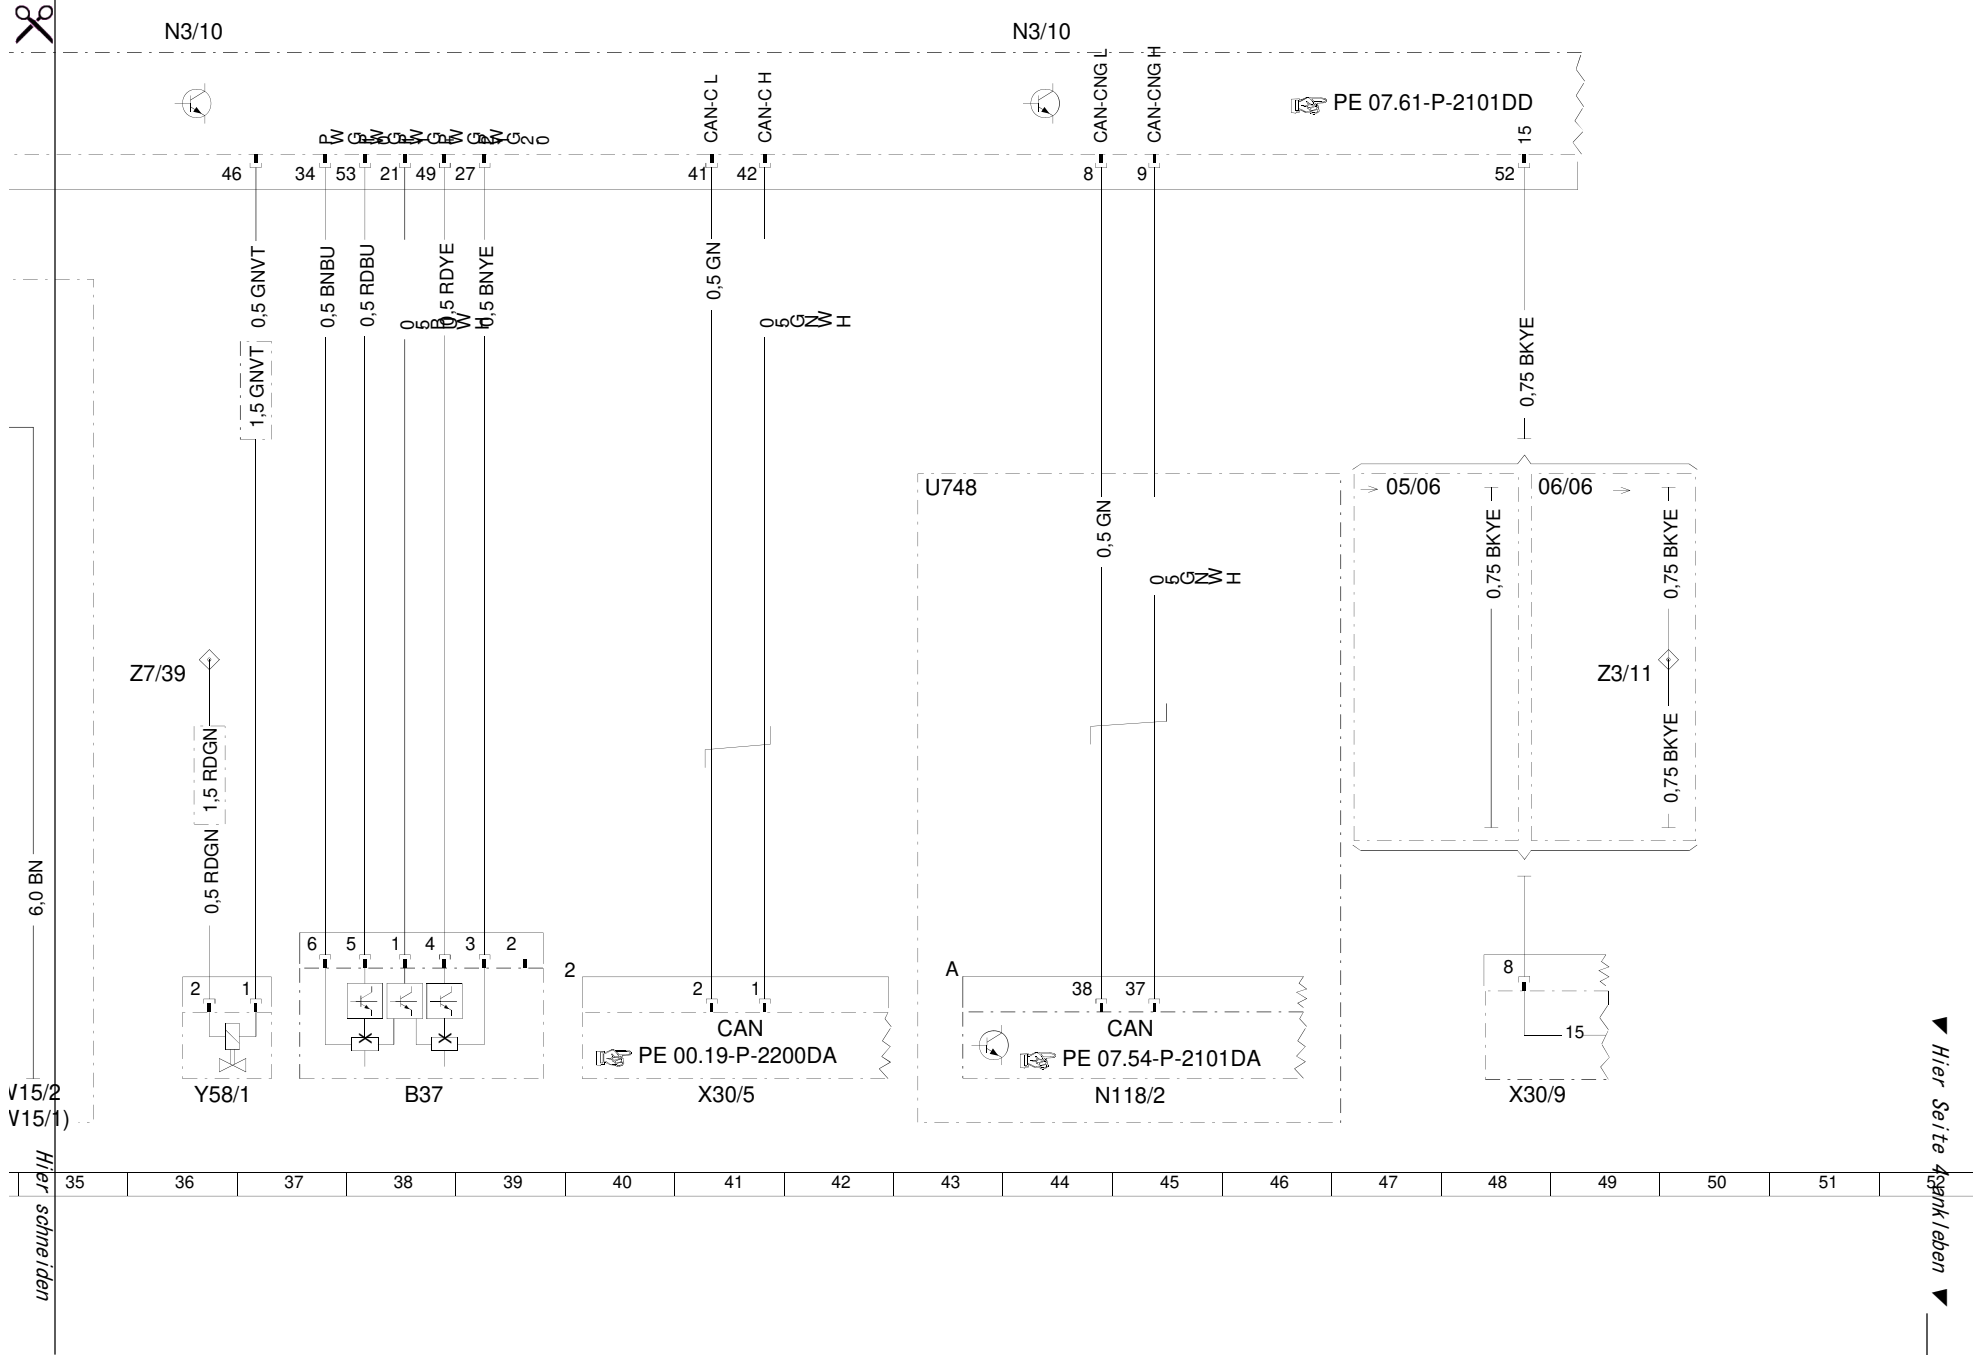

V15/2  
V15/1)

35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52

Hier schneiden

Hier Seite 4 anknüpfen

