

MODEL 211.0/ 2/ 6

- 1 Wiper system
- 2 Screw
- 3 Nut
- 4 Electrical connector



P82.35-2320-05

Modification notes

14.1.04	Disconnect/connect/remove ground lead from battery	
---------	--	--

	Remove/Install		
	Risk of injury in the form of trapping or crushing, or even severing of limbs, if caught in windshield wiper mechanism	Always remove ignition key when working on windshield wiper mechanism.	AS82.30-Z-0001-01A
1	Remove water collector		AR83.25-P-1402T
2	Remove bolt (2) at wiper system bracket (1)	Do not change the installation position of the wiper system bracket (1) at the partition wall, otherwise the contact pressure of the wiper arms changes and thus the wipe pattern.	*BA82.30-P-1011-01A
3	Unscrew nut (3) on both sides		*BA82.30-P-1006-01A
4	Lift wiper system (1) and disconnect electrical connector (4) at wiper motor		
5	Remove wiper system (1)		
6	Install in the reverse order		
7	Carry out function check on wiper system (1)		

Windshield wiper

Number	Designation		Model 211.0	Model 211.2	Model 211.6
BA82.30-P-1006-01A	Nut/screw, wiper system to body	Nm	19	19	19
BA82.30-P-1011-01A	Nut/screw, wiper system to bracket	Nm	13	13	13