


MODEL 211.0 up to 1.6.08 except CODE (809) Model year 2009

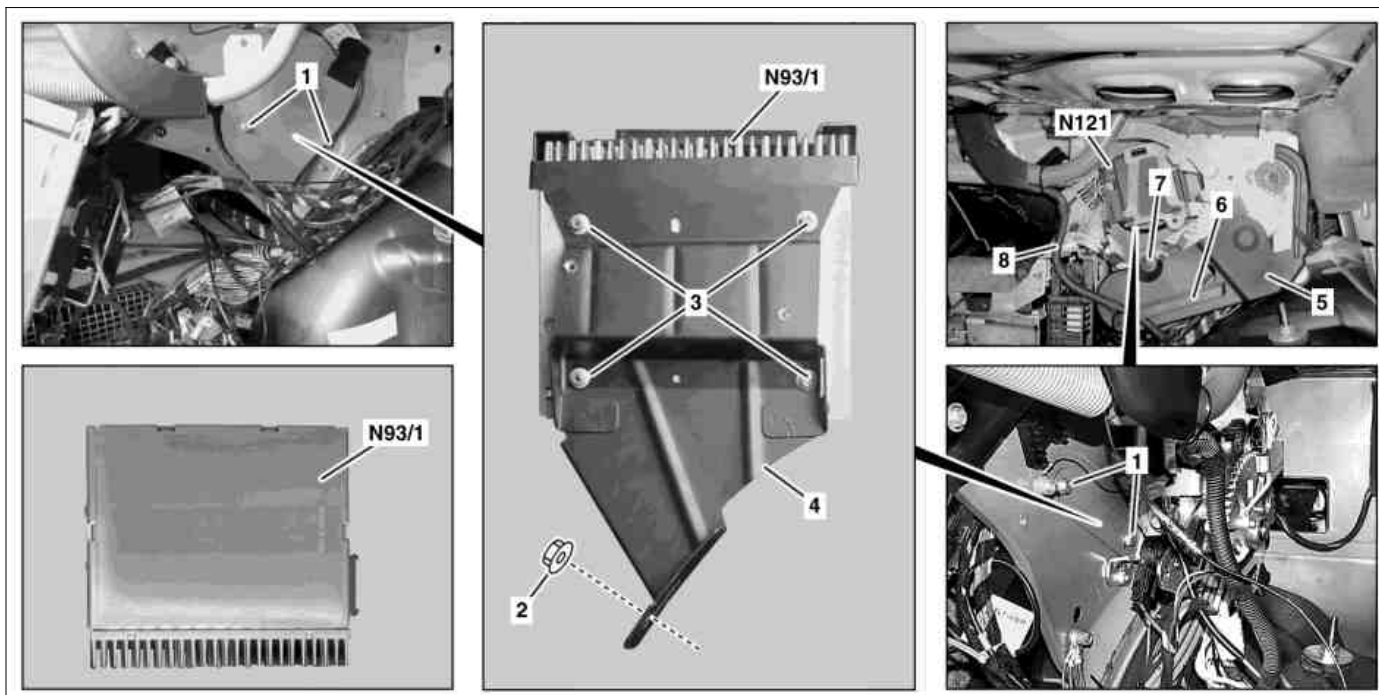

P82.60-4293-09

- | | | |
|---|---|--|
| 1 Bolts | 6 Bracket (with code (881) Remote trunk closing (RTC [HDFS])) | N93/1 Audio gateway control unit |
| 2 Nut | 7 Expansion rivet (with code (881) Remote trunk closing (RTC [HDFS])) | N121 TLC control unit (with code (881) remote trunk closing (RTC)) |
| 3 Nuts | 8 Wiring harness (with code (881) Remote trunk closing (RTC)) | |
| 4 Bracket | | |
| 5 Cover (with code (881) Remote trunk closing (RTC [HDFS])) | | |

	Remove/install		
	Information on preventing damage to electronic components due to electrostatic discharge		AH54.00-P-0001-01A
1	Transfer basic data for audio gateway control unit (N93/1) to STAR DIAGNOSIS	When replacing the audio gateway control unit (N93/1). i Installation: Transfer basic data from STAR DIAGNOSIS to the audio gateway control unit (N93/1).	
	Connect STAR DIAGNOSIS and read out fault memory		AD00.00-P-2000-04A
2	Release SAM control unit with fuse and relay box in luggage compartment and place to one side with lines attached		AR54.21-P-1258T
3	Remove pressurized-type reservoir for dynamic seat control	Only in vehicles with code (433) Left dynamic seat, incl. multicontour seat or with code (434) Right dynamic seat, incl. multicontour seat	AR91.25-P-1570T
4	Unclip bracket (6) and place wiring harness (8) to one side	Only in vehicles with code (881) Remote trunk closing (RTC [HDFS]).	
5	Remove expansion rivet (7) and remove cover (5)	Only in vehicles with code (881) Remote trunk closing (RTC [HDFS]).	
6	Unclip TLC [HDS] control unit (N121) from bracket and place to one side with lines attached	Only in vehicles with code (881) Remote trunk closing (RTC [HDFS]).	
7	Remove bolts (1)		
8	Unscrew nuts (2)		
9	Pull audio gateway control unit (N93/1) out until the electrical plug connections at the audio gateway control unit (N93/1) are accessible		
10	Unplug electrical plug sockets on audio gateway control unit (N93/1)		

11	Disconnect fiber optic cable connector from audio gateway control unit (N93/1)	ⓘ To avoid damaging the fiber optic cable, do not kink fiber optic cable, route over sharp edges or bend in radii smaller than 25 mm.	
12	Cover fiber optic cable		AR82.95-P-0005-01A
13	Remove nuts (3) and remove audio gateway control unit (N93/1) from bracket (4)	Only when replacing the audio gateway control unit (N93/1).	
14	Install in the reverse order		