


AR33.20-P-0440-01VM	Pressing out and attaching supporting joint at steering knuckle		
---------------------	---	--	--


**Nm** Wheel location, hub

Number	Designation	Model
		211.08/09/ 28/29
BA33.20-P-1017-01A	Self-locking nut, supporting joint to steering knuckle	Stage 1 Nm 70
		Stage 2 4° 50

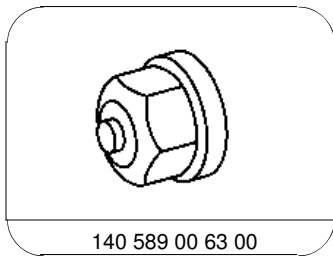

140 589 00 63 00

Thrust piece

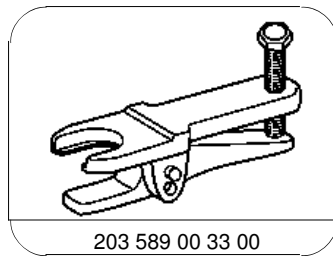


203 589 00 33 00

Puller

**Pushing off**

- 1 Unscrew self-locking nut from supporting joint (7) on steering knuckle (5).
- 2 Attach thrust piece (07a).
- 3 Use puller (07) to press out supporting joint (7).
- 4 Remove puller (07) and thrust piece (07a).

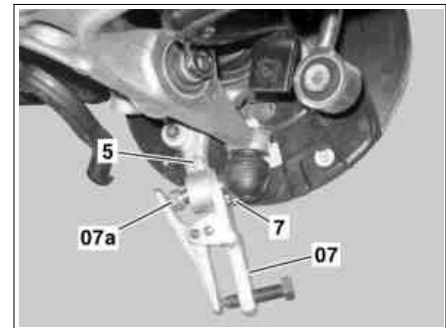

P33.20-2084-01

**Install**

- 5 Clean tapered connection.  
 The cone and thread must be free of grease and oil.
- 6 Tighten self-locking nut on supporting joint   
 Replace self-locking nut.