


AR46.40-P-0200-02IW	Pressing out and attaching track rod joint at steering knuckle		
---------------------	--	--	--


Tie rod

Number	Designation			Model 220.083/ 084/087/ 183/184/ 187	Model 211.08/09/ 28/29
BA46.40-P-1001-01E	Self-locking nut, tie rod to steering knuckle	Stage 1	Nm	55	55
		Stage 2	°	-	-

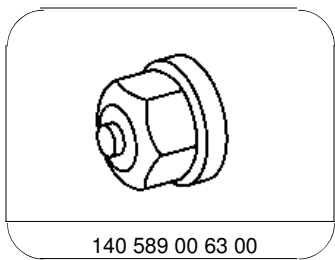

140 589 00 63 00

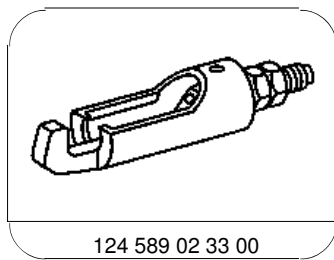


 
 
Thrust piece




124 589 02 33 00

Puller

Pushing off

- 1 Undo self-locking nut of tie rod joint (10a).
- 2  Mount thrust piece (045).
- 3 Pry off tie rod joint (10a)  using puller (044).
 Avoid damaging the rubber boot, as this would allow lubricant to leak from the tie rod joint (10a). This results in increased wear.
- 4  Remove puller (044) and  thrust piece (045).

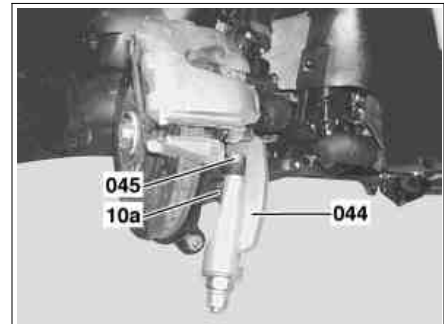

P46.40-2039-01

Shown on model 220

Attaching

- 5 Clean tapered connection.
 The cone and thread must be free of grease and oil
- 6 Replace self-locking nut and tighten .
 Counter ball head with an Allen wrench if necessary.