

<b>Item</b>	<b>Designation</b>	<b>Coordinates</b>
<b>A9/1</b>	AIRMATIC compressor unit	12L
<b>A9/1m1</b>	Air compressor motor	12L
<b>A9/1y1</b>	AIRMATIC pressure reduction valve	11L
<b>B22/3</b>	Rear axle level sensor	20L
<b>F32</b>	Front prefuse	17L
<b>F32f74</b>	Fuse 74	15K
<b>F34</b>	Interior fuse box	3L
<b>F34f37</b>	Fuse 37	1K
<b>K67</b>	AIRMATIC relay	14L
<b>N10/1</b>	Driver-side SAM control unit with fuse and relay module	6L
<b>N10/1f45</b>	Fuse 45	5K
<b>N97</b>	Rear axle level control system control unit	4A 12A 20A
<b>U74</b>	Valid for diesel engines	5H
<b>U75</b>	Valid for gasoline engines	5H
<b>W9</b>	Ground (left front, at lamp unit)	12H
<b>W15/1</b>	Ground (right footwell)	2E
<b>X30/5</b>	Left voltage distributor (CAN) connector	22L
<b>X62/8</b>	Rear axle multiple circuit junction connector	8E 8H
<b>X62/32</b>	Left rear axle multiple circuit junction connector	19E
<b>Y53/1</b>	AIRMATIC valve unit, left rear suspension strut	9L
<b>Y54/1</b>	AIRMATIC valve unit, right rear suspension strut	10L