

| Item | Designation |
|-----------------|--|
| <u>A7/3</u> | Traction system hydraulic unit |
| <u>B4/1</u> | Left fuel level sensor |
| <u>B4/2</u> | Right fuel level sensor |
| <u>E3</u> | Left taillamp |
| <u>E3e1</u> | Outer left turn signal lamp |
| <u>E3e2</u> | Outer left taillamp, parking lamp, rear fog lamp |
| <u>E3e3</u> | Left backup lamp |
| <u>E3e4</u> | Left stop lamp |
| <u>E3e5</u> | Inner left taillamp, rear fog lamp |
| <u>E3e7</u> | Inner left turn signal lamp |
| <u>E3e9</u> | Left stop lamp, taillamp and parking lamp |
| <u>E4</u> | Right taillamp |
| <u>E4e1</u> | Outer right turn signal lamp |
| <u>E4e2</u> | Outer right taillamp, parking lamp, rear fog lamp |
| <u>E4e3</u> | Right backup lamp |
| <u>E4e4</u> | Right stop lamp |
| <u>E4e5</u> | Inner right taillamp, rear fog lamp |
| <u>E4e7</u> | Inner right turn signal lamp |
| <u>E4e9</u> | Right stop lamp, taillamp and parking lamp |
| <u>E15/8</u> | Left luggage compartment lamp |
| <u>E15/9</u> | Right luggage compartment lamp |
| <u>E18/4</u> | Right trunk lamp |
| <u>E18/5</u> | Left trunk lamp |
| <u>E19/1</u> | Left license plate lamp |
| <u>E19/2</u> | Right license plate lamp |
| <u>E21</u> | Center high-mounted stop lamp |
| <u>E40</u> | Trunk lid ambient lamp |
| <u>F33</u> | Rear prefuse |
| <u>F33f79</u> | Fuse 79 |
| <u>M3</u> | Fuel pump (FP) |
| <u>M44</u> | Charge air cooler circulation pump |
| <u>N10/2</u> | Rear SAM control module with fuse and relay module |
| <u>N10/2f1</u> | Fuse 1 |
| <u>N10/2f2</u> | Fuse 2 |
| <u>N10/2f4</u> | Fuse 4 |
| <u>N10/2f7</u> | Fuse 7 |
| <u>N10/2f11</u> | Fuse 11 |

| | |
|----------------|---|
| <u>N10/2kA</u> | Fuel pump relay module |
| <u>N10/2kB</u> | Relay 2, circuit 15R |
| <u>N10/2kD</u> | Rear wiper relay |
| <u>N32/1</u> | Driver front seat adjustment control module with memory |
| <u>N32/2</u> | Front passenger front seat adjustment control module with memory |
| <u>N47-5</u> | ESP control module |
| <u>N111</u> | Rear door control module |
| <u>S88/4</u> | Pawl rotary tumbler switch |
| <u>S88/6</u> | Trunk lid contact switch |
| <u>S88/8</u> | Trunk lid external operation switch |
| <u>U57</u> | Valid for station wagon |
| <u>U58</u> | Valid for sedan and LWB sedan |
| <u>U137</u> | Valid for engine 112 and 113 |
| <u>U166</u> | Installed worldwide up to 06/2003. Installed again in USA and Canada as of 2005 and also in Mexico, Greece, 5 Africa and Japan as of 01/2006. |
| <u>U292</u> | Valid for all except E 55 AMG |
| <u>U425</u> | Valid for E 55 AMG |
| <u>U484</u> | Valid for M273 ME |
| <u>U742</u> | Valid for engine 648 |
| <u>U819</u> | Valid for engine 272 |
| <u>U828</u> | Valid for super low emission |
| <u>U880</u> | Valid for engine 642 |
| <u>U913</u> | Not valid for super low emission |
| <u>W2</u> | Ground (at right headlamp unit) |
| <u>W6</u> | Ground (left wheelhousing in trunk) |
| <u>W6/1</u> | Ground (left taillamp in trunk) |
| <u>X30/7</u> | Left voltage distributor (CAN) connector |
| <u>X30/9</u> | Circuit 15 voltage distributor |
| <u>X36/3</u> | Fuel pump wiring harness connector |
| <u>X62</u> | VSS [GES] connector (signals) |
| <u>Z3/11z1</u> | Circuit 15 connector sleeve (fused) |
| <u>Z6/20z1</u> | Tailgate ground connector sleeve |
| <u>Z6/20z2</u> | Tailgate ground connector sleeve |

