




P46.10-2618-01



P46.10-2619-01

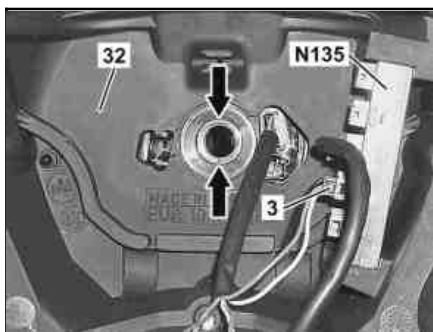


P46.10-2620-01

- 3 Electrical connector
- 32 Steering wheel
- 32c Countersunk screw
- 4 Vibration damper
- 4a Bolts

A45 Fanfare horns and airbag clock spring contact

N135 Steering wheel gear shift signal processing module

 
 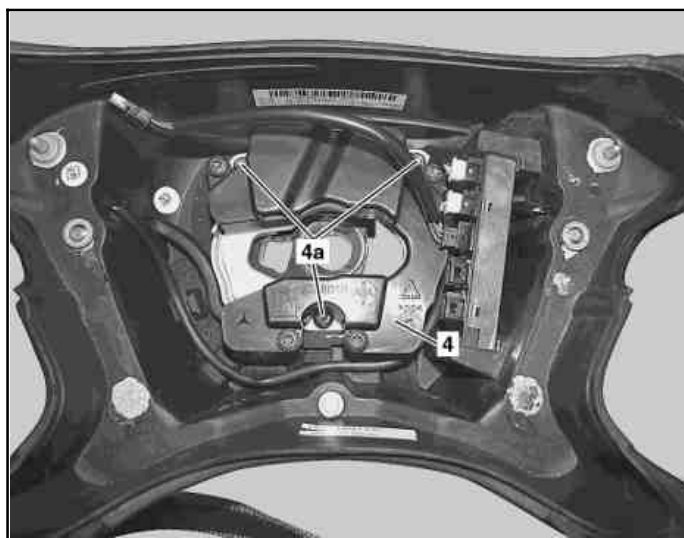




P46.10-2787-11

Modification notes

24.4.06	Check whether a vibration damper is installed added	Step 6	
---------	---	--------	--

	Remove/install		
1	Move steering wheel (32) to horizontal position	Front wheels in straight ahead position	
Danger!	Risk of injury caused by performing testing or repair work on airbag or emergency tensioning retractor units.	Store airbag units with deployment side facing up; do not expose to temperatures greater than 100 °C. When working on these units, disconnect the power supply.	AS91.00-Z-0001-01A
2 	Remove airbag unit from steering wheel (32) Notes on performing repair, body work and welding on vehicles with airbags and ETR units		AR91.60-P-0660T AH91.00-P-0002-01M
3	Unscrew countersunk screw (32c), steady steering wheel (32).	Installation: Replace countersunk screw. 	*BA46.10-P-1001-02A
4	Detach electrical connector (3) of steering wheel gear shift signal processing module (N135)	Vehicles as of model year 04	
5	Remove steering wheel (32), passing the cables from the airbag through the opening	Installation: Align recesses of the serrations (arrows) in the steering wheel with the markings on the steering shaft.	
	Checking		
6	Check whether a vibration damper (4) is installed	When replacing the steering wheel (32)	

		<p> Steering wheels are only available with vibration dampers. If a steering wheel is installed without a vibration damper, then the vibration damper must be removed from the new steering wheel, undo bolts (4a) to do so.</p> <p></p>	*BA46.10-P-1005-02A
7	Check fanfare horns and airbag clock spring contact (A45) for damage	<p> The clock spring contact must not be twisted when the steering wheel (32) is detached. If the clock spring contact is twisted:</p> <p style="text-align: center;">↓</p> <p>Vehicles up to model year 04: Set center position of clock spring contact, if necessary:</p> <p style="text-align: center;">↓</p> <p>Replace clock spring contact. Vehicles as of model year 04: Replace clock spring contact.</p>	<p>AR46.10-P-0200-01I</p> <p>AR46.10-P-0200T</p> <p>AR46.10-P-0200TA</p>
8	Install in the reverse order		
9	Conduct a road test	<p> Tests during the road test:</p> <p>Turn signal reset When the steering wheel (32) is offset by more than 1 tooth, satisfactory resetting of the turn signal is no longer guaranteed.</p> <p>Airbag indicator lamp The SRS indicator lamp must not light up on full steering lock in both directions.</p> <p>Steering wheel position (32) If the steering wheel is crooked, adjust it by max. 1 tooth.</p>	

 **Steering wheel**

Number	Designation	Model 211
BA46.10-P-1001-02A	Bolts, steering wheel to steering shaft Nm	80
BA46.10-P-1005-02A	Bolt, vibration damper to steering wheel Nm	5