









Removal, tampering, or altering of the device will void any warranties, and is not permitted. Do not tamper with, alter, or use in any non-approved way.

Any unauthorized modification to this device could void the user's authority to operate the equipment.

- ▶ Press button  or  to select the Sett. menu.
- ▶ Press button  or  to select the Vehicle submenu.
- ▶ Press button .
- ▶ Press button  or  to select the Radar Sensor (See Oper. Manual): function.

The current setting Enabled or Disabled is shown.



- ▶ Press button  again if you would like to change the current status. Depending on the previous status, the radar sensors will be switched on (Enabled) or off (Disabled).

**i** The selected status of the radar sensors remains stored in memory even if the engine is turned off and restarted.

### Convenience submenu

Access the Convenience submenu via the Sett. menu. Use the Convenience submenu to activate the easy-entry/exit feature (▷ page 145) or to activate the seat belt adjustment feature (▷ page 145).

#### Activating easy-entry/exit feature








Use this function to activate and deactivate the easy-entry/exit feature (▷ page 93).


#### Warning!


You must make sure no one can become trapped or injured by the moving steering wheel when the easy-entry/exit feature is activated.

To stop steering wheel movement, move steering wheel adjustment stalk or press one of the memory position buttons.

Do not leave children unattended in the vehicle, or with access to an unlocked vehicle. Children could open the driver's door and unintentionally activate the easy-entry/exit feature, which could result in an accident and/or serious personal injury.

- ▶ Press button  or  to select the Sett. menu.
- ▶ Press button  or  to select the Convenience submenu.
- ▶ Press button .
- ▶ Press button  or  to select the Easy Entry/Exit: function. The current setting Enabled or Disabled is shown.

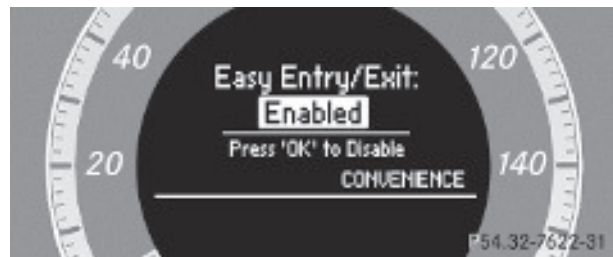

- ▶ Press button  to change the current status. Depending on the previous status, the Easy Entry/Exit: feature will be Enabled or Disabled.

#### Activating/deactivating seat belt adjustment function

Use this function to set the seat belts to be adjusted automatically with the driver's or front passenger seat belt fastened and the starter switch in position **2**.

For more information on the seat belt adjustment function, see (▷ page 51).