


|     |  |           |              |
|-----|--|-----------|--------------|
| 5.1 | Disconnect electrical connector (6)  | Model 207 |              |
| 4   | Detach trunk lining (5) far enough to enable access to the electrical connector (6)            |           |              |
| 3   | Detach electrical connector (4) from trunk lid (1) and remove cover (3) from trunk lid (1) and |           |              |
| 2   | Remove expansion clips (2)   |           | 452589016300 |
| 1   | Remove bolts (1)   | Model 207 |              |
|     | Remove/install   |           |              |

P82.10-5773-06

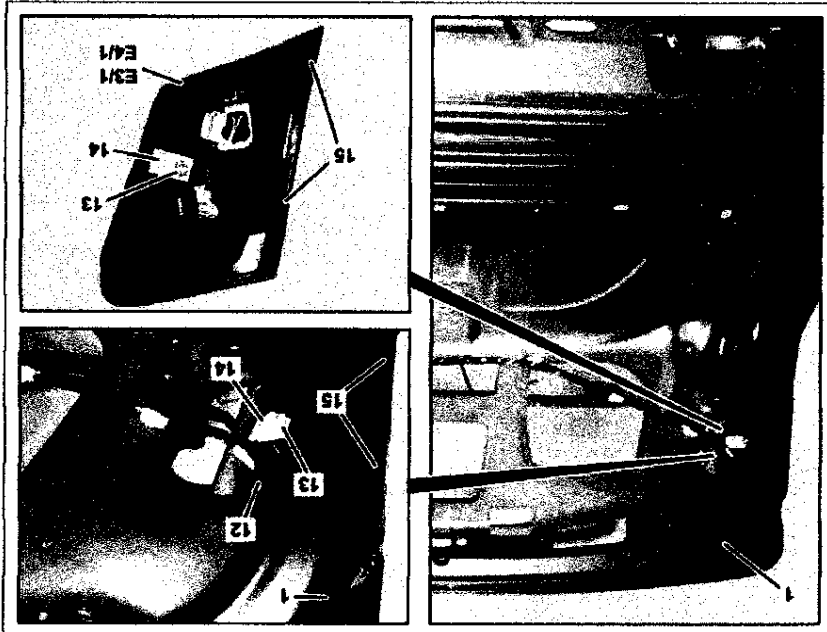

- 1 Trunk lid
- 12 Electrical connector
- 13 Nut
- 14 Bracket
- 15 Fastening shackles
- E3/1 Inner left rear lamp unit
- E4/1 Inner right rear lamp unit


Model 212.0/1, shown on left inner rear lamp unit (E3/1) with removed trunk lining


- 1 Bolts
- 2 Expansion clip
- 3 Cover
- 4 Electrical connector
- 5 Trunk lid lining

- E3/1 Inner left rear lamp unit
- E4/1 Inner right rear lamp unit
- E4/2 Left ambient lamp and trunk lid warning lamp (model 207)

- 6 Electrical connector
- 7 Nut
- 8 Cover
- 9 Gasket

P82.10-5843-09

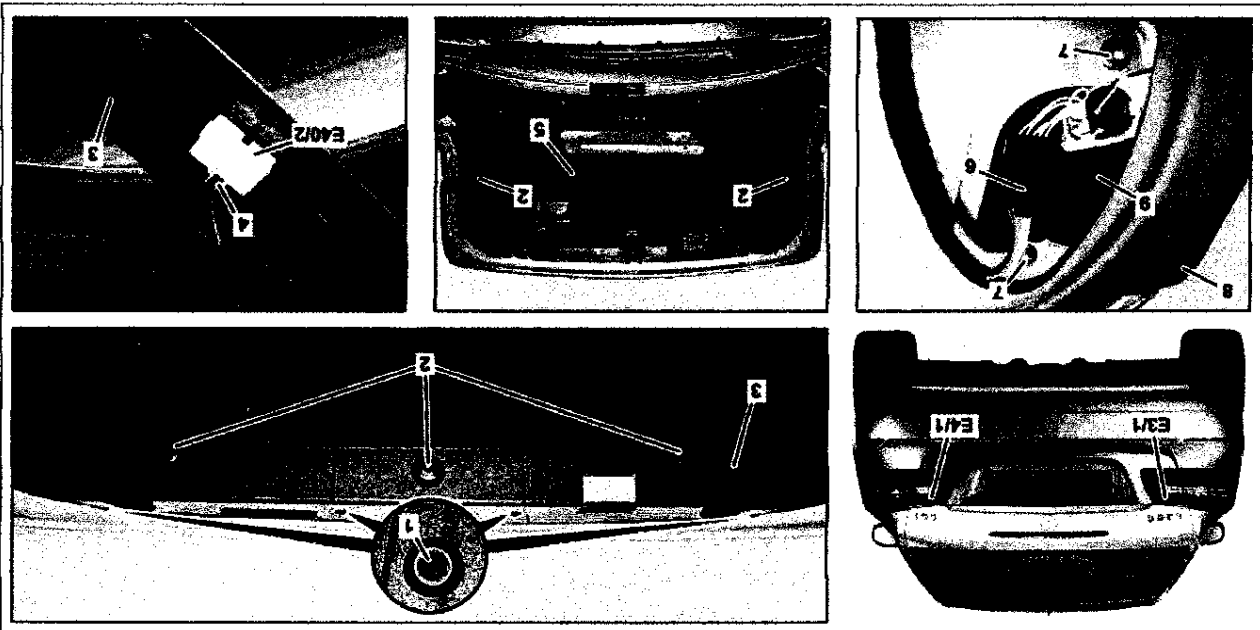

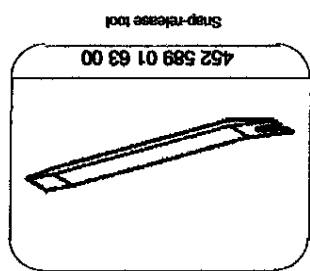

|     |           |   |  |
|-----|-----------|---|--|
| 5.2 | Model 212 | Disconnect electrical connector (12)  |  |
| 6   | Model 207 | Unclip cover (8) on trunk lid (1) and remove  |  |
| 7.1 | Model 207 | Unscrew nuts (7)  |  |
| 7.2 | Model 212 | Stacken off nut (13) far enough until the bracket (14) is disconnected from trunk lid (1) |  |
| 8   |           | Remove inner left rear lamp unit (E3/1) or inner right rear lamp unit (E4/1)              |  |
| 9   |           | Install in the reverse order  |  |

1 Do not unscrew nut (13) completely.  
 1 Installation: Check gasket (9) for signs of damage, replace if necessary. On model 212 check that fastening shades (15) are correctly seated on trunk lid (1).